



Education Sharing System

User Manual

TABLE OF CONTENTS

Chapter 1 Introduction and Installation	10
1.1 Indicator Description	10
1.2 Device Installation.....	10
1.2.1 Wall-Mounted Installation	10
1.2.2 Standing Installation	11
Chapter 2 Start-up	13
2.1 Startup and Shutdown	13
2.1.1 Startup	13
2.1.2 Shutdown	13
2.2 Network Connection	13
2.3 Activate Your Device	14
2.3.1 Default User Name and IP Address	14
2.3.2 Activate via Local Menu	14
2.3.3 Activate via Web Browser	14
2.3.4 Activate via SADP	15
2.4 Configure Basic Network Parameters.....	16
2.4.1 Configure Basic Network Parameters via Local Menu	16
2.4.2 Configure Basic Network Parameters via Web Browser	17
2.5 SADP Search.....	19
2.6 Education Specified Camera Connection	20
2.6.1 Connect Network Camera via PoE Interface	20
2.6.2 Connect via Network.....	21
2.7 Wizard Configuration	22
Chapter 3 Live View	23
3.1 Live View via Web Browser	23
3.2 Live View via Local Menu	25
3.3 PTZ Control	26
3.3.1 PTZ Settings.....	26
3.3.2 Set PTZ Presets	27
3.3.3 Call Presets.....	28
Chapter 4 HDD Management.....	29
4.1 Format Hard Disk	29
4.2 Manage Network Hard Disk	29
4.3 Set Cloud Storage.....	30
4.4 Record Schedule Settings.....	30
4.5 Advanced Settings.....	31
4.5.1 HDD Sleeping	31
4.5.2 Overwriting	31
Chapter 5 Recording Settings.....	32
5.1 Configure Recording Parameters via Local Menu.....	32
5.2 Configure Live View Control Parameters via Web Browser.....	32

5.2.1 Manage Background Picture	32
5.2.2 Courseware Detection.....	33
5.2.3 Automatic Live View Control.....	35
5.2.4 Course Information	38
5.2.5 Course Plan	38
5.2.6 RTMP Live.....	39
5.2.7 Sound Mix Settings	40
5.3 Course Publishing.....	41
5.3.1 Publish Course.....	41
5.3.2 Search Published Course	43
5.4 Video Head/Tail Configuration	43
5.5 Logo Configuration.....	44
5.5.1 Upload Logo	45
5.5.2 Display Logo	45
Chapter 6 Interaction	46
6.1 Interaction Settings.....	46
6.1.1 Account Management.....	46
6.1.2 Configure Platform Parameters.....	46
6.1.3 Configure Interactive Video Linkage	47
6.1.4 Configure Interaction View	47
6.1.5 Sending Channel Encoding Settings	48
6.1.6 Configure Sending Channel.....	50
6.1.7 Configure Meeting Room Permission.....	51
6.1.8 Configure Course Output	51
6.1.9 Overlay Interactive Alias.....	52
6.1.10 Interactive Course Data Counting	52
6.1.11 Network Status Counting	52
6.1.12 Interactive Facial Image Live View	52
6.2 Interaction Operation	53
6.2.1 Join/Initiate Interaction via Web Browser.....	53
6.2.2 Join/Initiate Interaction via Local Menu.....	56
Chapter 7 Course Playback and Download.....	58
7.1 Course Playback	58
7.1.1 Play Back Course Videos via Local Menu.....	58
7.1.2 Play Back Course Videos via Web Browser.....	58
7.2 Course Download.....	59
7.2.1 Download Courses via Local Menu	59
7.2.2 Download Courses via Web Browser	60
Chapter 8 Smart Settings	61
8.1.1 Enable Class Statistics Data	61
8.1.2 Search Class Statistics Data	61
Chapter 9 Network Settings.....	63
9.1 PPPoE Settings	63

9.2 DDNS Settings	63
9.3 Email Settings.....	66
9.4 NAT Settings.....	67
9.4.1 UPnP™ Settings	67
9.4.2 Manual Mapping.....	68
9.5 HTTPS Settings	69
9.6 SSH Settings	70
Chapter 10 Alarm Settings	71
10.1 Alarm Input	71
10.2 Alarm Output	72
10.3 Exception	73
Chapter 11 User Management.....	75
11.1 Add a User	75
11.2 Modify a User	76
11.3 Delete a User	77
Chapter 12 Maintenance	78
12.1 Reboot the Device.....	78
12.2 Default Settings.....	78
12.3 Export/Import Configuration File.....	79
12.4 Import/Export IP Camera Configuration File.....	79
12.5 Remote Upgrade	79
Chapter 13 Other Settings	80
13.1 Sound Settings	80
13.2 Video Settings	80
13.3 Display Settings	81
13.3.1 Configure Auto Screen Off Time.....	81
13.3.2 Configure LCD Screen Brightness	81
13.3.3 Menu Output	81
13.3.4 HDMI/VGA Output Image Parameter Settings	82
13.3.5 Configure OSD.....	82
13.4 Time Settings	83
13.4.1 Configure Time via Local Menu	83
13.4.2 Configure Time via Web Browser	84
13.5 DST Settings	85
13.6 Configure Auto Logout Time	86
13.7 Configure Password Protection.....	86
13.8 View Device Info	86
Chapter 14 Appendix.....	88
14.1 SADP Software Introduction	88
14.2 Glossary	89
14.3 Communication Matrix	91
14.4 Device Command	91

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

- This product can only enjoy the after-sales service support in the country or region where the purchase is made.
- If the product you choose is a video product, please scan the following QR code to obtain the "Initiatives on the Use of Video Products", and read it carefully.



Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.
- **HDMI**™ The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT

LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Regulatory Information

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: <http://www.recyclethis.info>.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: <http://www.recyclethis.info>.

Applicable Models

This manual is applicable to the models listed in the following table.

Product Name	Model
Education Sharing System	DS-9604LNI-V/B02

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 NOTE	Provides additional information to emphasize or supplement important points of the main text.
 WARNING	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 DANGER	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.

Safety Instructions

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- Firmly connect the plug to the power socket. Do not connect several devices to one power adapter. Power off the device before connecting and disconnecting accessories and peripherals.
- Shock hazard! Disconnect all power sources before maintenance.
- The equipment must be connected to an earthed mains socket-outlet.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- ⚡ indicates hazardous live and the external wiring connected to the terminals requires installation by an instructed person.
- Never place the equipment in an unstable location. The equipment may fall, causing serious personal injury or death.
- Input voltage should meet the SELV (Safety Extra Low Voltage) and the LPS (Limited Power Source) according to the IEC60950-1.
- High touch current! Connect to earth before connecting to the power supply.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- Use the device in conjunction with an UPS, and use factory recommended HDD if possible.
- This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- This equipment is not suitable for use in locations where children are likely to be present.
- CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
- Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).
- Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.
- Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.
- Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.
- Dispose of used batteries according to the instructions.
- Keep body parts away from fan blades and motors. Disconnect the power source during servicing.
- Keep body parts away from motors. Disconnect the power source during servicing.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- The device is designed for indoor use only. Install it in a well-ventilated, dust-free environment without liquids.
- Ensure recorder is properly secured to a rack or shelf. Major shocks or jolts to the recorder as a result of dropping it may cause damage to the sensitive electronics within the recorder.
- The equipment shall not be exposed to dripping or splashing and that no objects filled with liquids shall be placed on the equipment, such as vases.
- No naked flame sources, such as lighted candles, should be placed on the equipment.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. The openings shall never be blocked by placing the equipment on a bed, sofa, rug or other similar surface.
- For certain models, ensure correct wiring of the terminals for connection to an AC mains supply.
- For certain models, the equipment has been designed, when required, modified for connection to an IT power distribution system.
-  identifies the battery holder itself and identifies the positioning of the cell(s) inside the battery holder.
- + identifies the positive terminal(s) of equipment which is used with, or generates direct current. - identifies the negative terminal(s) of equipment which is used with, or generates direct current.
- Keep a minimum 200 mm (7.87 inch) distance around the equipment for sufficient ventilation.
- For certain models, ensure correct wiring of the terminals for connection to an AC mains supply.
- Use only power supplies listed in the user manual or user instruction.
- The USB port of the equipment is used for connecting to a mouse, keyboard, USB flash drive, or Wi-Fi dongle only.
- Use only power supplies listed in the user manual or user instruction.
- Do not touch the sharp edges or corners.

Chapter 1 Introduction and Installation

1.1 Indicator Description

The device has an indicator at the lower-right corner of the front panel. The indicator indicates different working status of your device.

Table 1-1 Indicator Description

Indicator Status	Description
Unlit	The device is shut down.
Solid Blue	The device is powered on.
Fast Blinking Blue	The device is downloading or publishing videos.
Slowly Blinking Blue	The device is starting up.
Solid Red	The device system is shut down, but the power is still on.
Fast Blinking Red	The video is exceptional.

1.2 Device Installation

1.2.1 Wall-Mounted Installation

Before you start:

Prepare suitable installation tools, including screwdrivers and an electric drill.

Step 1 Take out the accessories from the device package.

Step 2 Determine the mounting position for the wall-mounted bracket (as the direction shown in the following figure).

Step 3 Mark 4 holes for installing expansion bolts.

Step 4 Secure the bracket on to the wall with 4 expansion bolts.

Step 5 Align the device mounting hooks with the bracket.

Step 6 Mount the device on the bracket.

Step 7 Tighten 2 screws at the bottom to fix the device firmly.

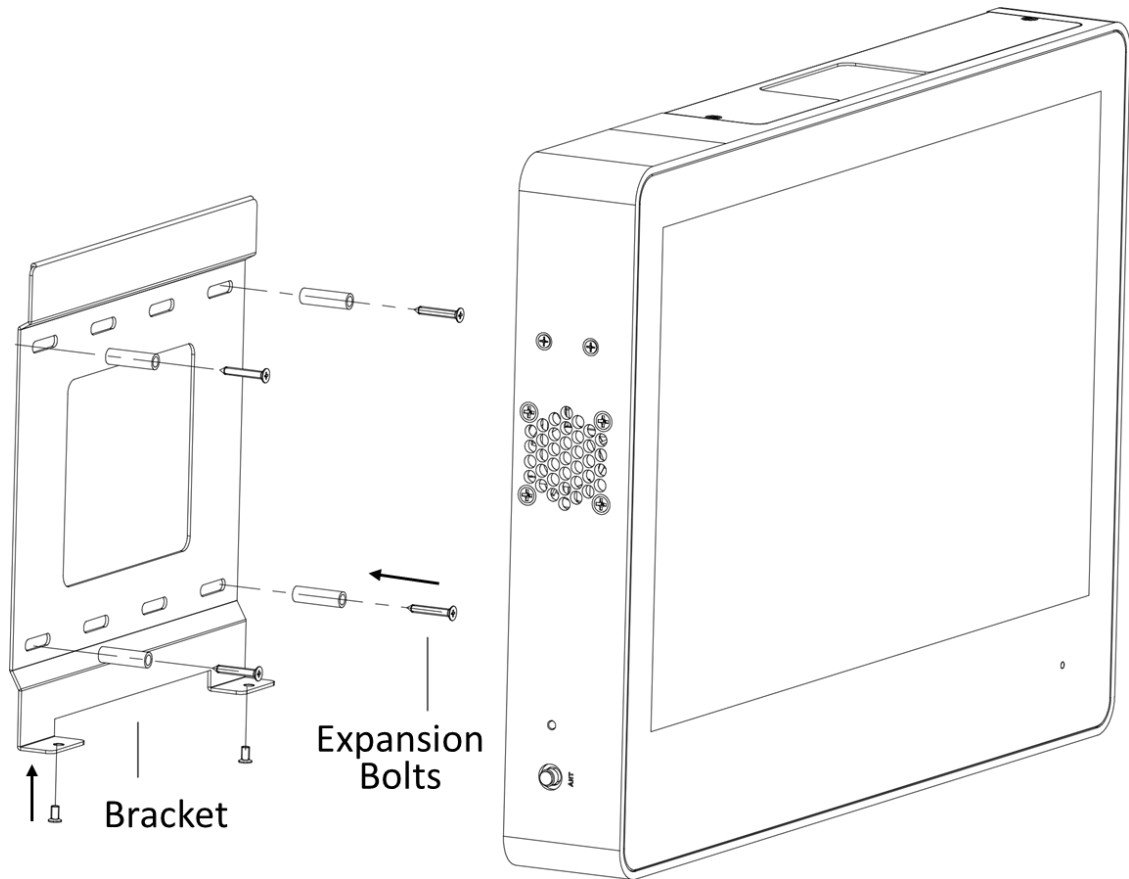


Figure 1-1 Wall-Mounted Installation

1.2.2 Standing Installation

Before you start:

Prepare suitable installation tools, including screwdrivers.

Step 1 Take out the accessories from the device package.

Step 2 Align the standing bracket holes with the device (as the direction shown in the following figure).

Step 3 Tighten 2 screws at the backside to fix the device firmly.

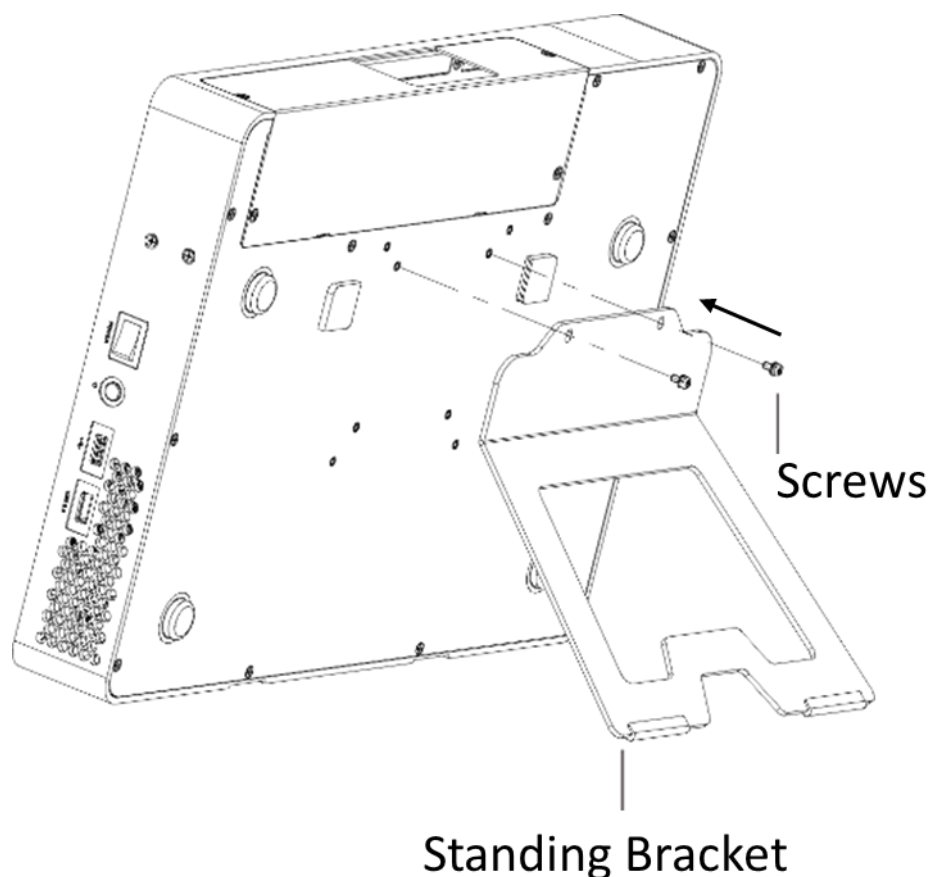


Figure 1-2 Standing Installation

Chapter 2 Start-up

2.1 Startup and Shutdown

Proper startup and shutdown procedures are crucial to expanding the life of the device. Follow the steps to start your device.

2.1.1 Startup

Step 1 Connect the device and a socket with the provided power cord. It is HIGHLY recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device.

Step 2 Turn on the power switch at the device side panel.

2.1.2 Shutdown

Step 1 Tap **Power** at the upper-right corner.

Step 2 Tap **Shutdown**, and wait for the device to power off.

Step 3 Turn off the power switch at the device side pane.

2.2 Network Connection



- You shall acknowledge that the use of the product with Internet access might be under network security risks. For avoidance of any network attacks and information leakage, please strengthen your own protection. If the product does not work properly, please contact with your dealer or the nearest service center.
- To ensure the network security of the education sharing system, we recommend you to have the device assessed and maintained termly. You can contact us if you need such service.

Purpose:

Create network connection between the education sharing system and your computer. Two methods are provided, including connecting the education sharing system via a LAN (Local Area Network) and via a WAN (Wide Area Network). We take the example of connecting via LAN to describe the steps.

Step 1 Create the network connection between the device and your computer.

- Option1: Directly connect the device to the computer with a network cable.
- Option 2: Connect the device and your computer via a switch or a router.

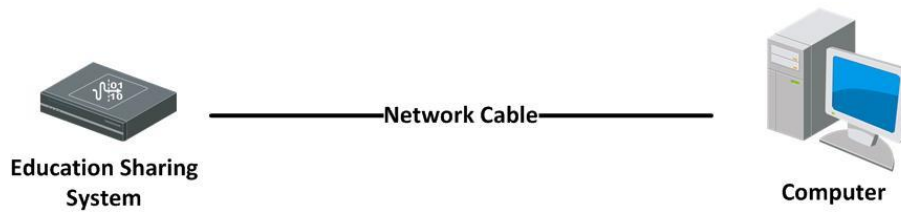


Figure 2-1 Connect Directly

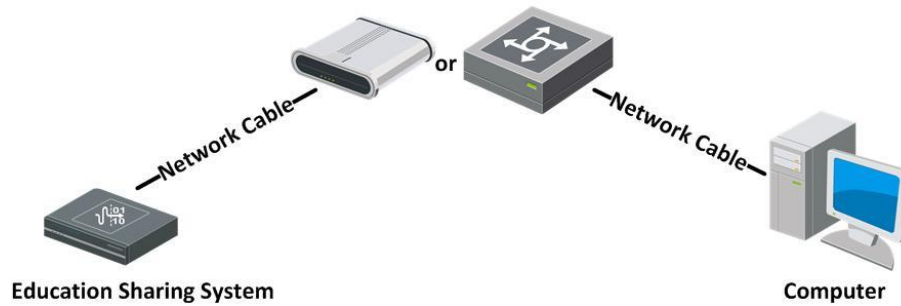


Figure 2-2 Connect via a Switch or a Router

2.3 Activate Your Device

2.3.1 Default User Name and IP Address

- Default administrator account: admin.
- Default IPv4 address: 192.168.1.64.

2.3.2 Activate via Local Menu

For the first-time access, you have to set an admin password to activate your device. No operation is allowed before activation. You can also activate the device via web browser, or SADP.

Step 1 Enter the admin password twice.



WARNING

STRONG PASSWORD RECOMMENDED—We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 2 Tap **Activate**.

2.3.3 Activate via Web Browser

Purpose:

You can get access to the device via web browser. The supported resolutions include 1024*768 and above.

Step 1 Open web browser, input the device IP address. The default IP address is 192.168.1.64.

Step 2 Press **Enter**.

Step 3 Enter the admin password twice.



WARNING

STRONG PASSWORD RECOMMENDED—We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 4 Click **OK**



NOTE

You may have to close the web browser to finish the installation of the plug-in.

2.3.4 Activate via SADP

Purpose:

SADP software is used for detecting the online device, activating the device, and resetting its password.

Before you start:

Get the SADP software from the supplied disk or the official website, and install the SADP according to the prompts.

Step 1 Connect your video recorder power supply to an electrical outlet and turn on it.

Step 2 Run the SADP software to search the online recorders.

Step 3 Check the recorder status from the device list, and select the inactive recorder.

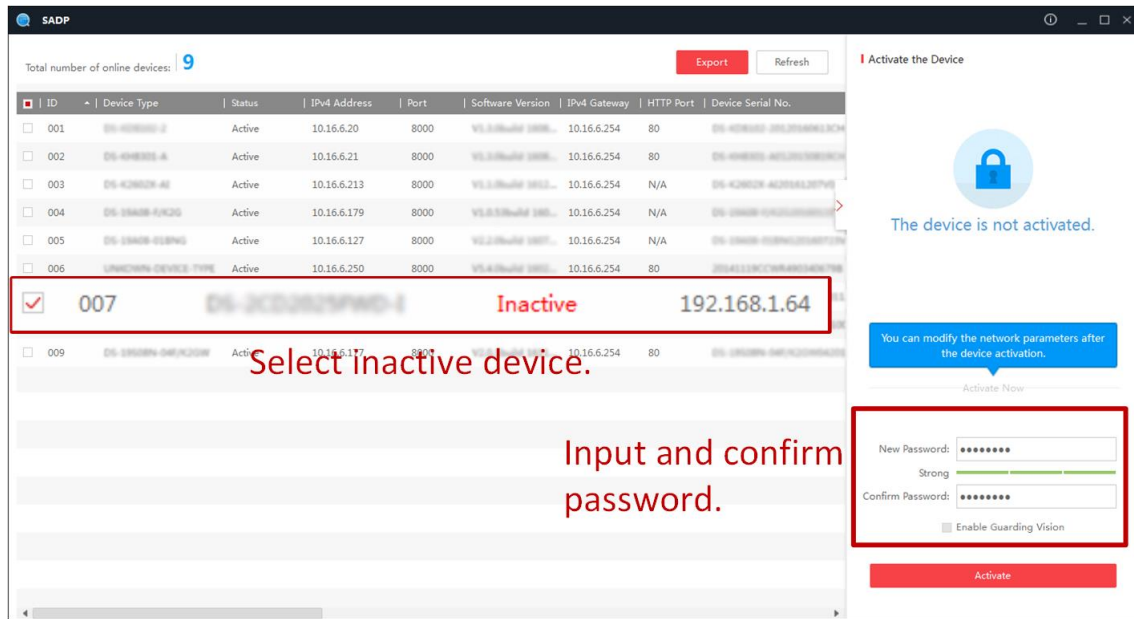


Figure 2-3 Activate via SADP

Step 4 Create and input the new password in the password field, and confirm the password.



WARNING

STRONG PASSWORD RECOMMENDED—We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 5 Click **Activate**.

2.4 Configure Basic Network Parameters

2.4.1 Configure Basic Network Parameters via Local Menu

Step 1 Tap **System Settings** > **System** > **Network**.

The screenshot displays a network configuration interface with the following elements:

- Work Mode:** A dropdown menu currently set to "Net Fault-Tolerance" with a right-pointing chevron.
- NIC Type:** A dropdown menu currently set to "Self-Adaptive" with a right-pointing chevron.
- DHCP:** A toggle switch that is currently turned on (indicated by a dark slider).
- IP Address:** A text input field with a light blue background.
- Subnet Mask:** A text input field with a light blue background.
- Gateway:** A text input field with a light blue background.

Step 2 Set **Working Mode** as **Net Fault-Tolerance**, **Load Balance**, or **Multi-Address**.

- **Net-fault Tolerance Mode:** The two NIC cards use the same IP address, and you can select the Main NIC to any LAN. By this way, in case of one NIC card failure, the system will automatically enable the standby NIC card so as to ensure the normal running of the whole system.
- **Load Balance:** By using the same IP address and two NIC cards share the load of the total bandwidth, which enables the system to provide two Gigabit network capacity.
- **Multi-address Mode:** The parameters of the two NIC cards can be configured independently. You can select a LAN in the NIC type field for parameter settings. You can select one NIC card as the default route. And then the system is connecting with the extranet the data will be forwarded through the default route.

Step 3 Set **NIC Type**.

Step 4 IPv4 IP address parameters.

- If you enable **DHCP** (Dynamic Host Configuration Protocol), the device will obtain IPv4 address parameters automatically.
- If you disable **DHCP**, you shall manually enter IPv4 address parameters, including **IP Address**, **Subnet Mask**, and **Gateway**.

2.4.2 Configure Basic Network Parameters via Web Browser

Step 1 Go to **Configuration > System Settings > Network Settings > TCP/IP**.

Working Mode: Net Fault-tolerance

NIC Type: Auto

☐ DHCP

IPv4 Address: [text box]

IPv4 Subnet Mask: [text box]

IPv4 Default Gateway: [text box]

IPv6 Address: [text box]

IPv6 Default Gateway: [text box]

Mac Address: [text box]

MTU: 1500

DNS Server

☐ Auto DNS

Preferred DNS Server: [text box]

Alternate DNS Server: [text box]

Main NIC: Lan1

Save

Figure 2-4 Basic Network Settings

Step 2 Select **Working Mode** as **Net Fault-Tolerance**, **Load Balance**, or **Multi-Address**.

- **Net-fault Tolerance Mode:** The two NIC cards use the same IP address, and you can select the Main NIC to any LAN. By this way, in case of one NIC card failure, the system will automatically enable the standby NIC card so as to ensure the normal running of the whole system.
- **Load Balance:** By using the same IP address and two NIC cards share the load of the total bandwidth, which enables the system to provide two Gigabit network capacity.
- **Multi-address Mode:** The parameters of the two NIC cards can be configured independently. You can select a LAN in the NIC type field for parameter settings. You can select one NIC card as the default route. And then the system is connecting with the extranet the data will be forwarded through the default route.

Step 3 Set the NIC settings.

- 1) Select **NIC Type**.
- 2) Enter **IPv4 Address**, **IPv4 Subnet Mask**, **IPv4 Default Gateway**. You can check **DHCP** (Dynamic Host Configuration Protocol) to obtain IPv4 address dynamically.

Step 4 Optionally, you can configure the maximum transmission unit (MTU) as your desire.

Step 5 Enter DNS server parameters.

Step 6 Click **Save** to save the settings.

2.5 SADP Search

Purpose:

You can search and modify network parameters of IP cameras in the same network segment.

Step 1 Go to **Configuration > System Settings > Camera Management > SADP Search**.

Step 2 Click **Refresh** to search the IP camera in the same network segment.

Step 3 Optionally, edit the network parameters of IP camera.

- 1) Select the camera.
- 2) Click **Modify**.
- 3) Edit the network parameters, including IP address and port.
- 4) Enter the user name and password.
- 5) Click **OK**.

2.6 Education Specified Camera Connection

Before you can get the live view or record the image of classroom, connect the education specified camera to the device via PoE (Poser over Ethernet) interface or network.

2.6.1 Connect Network Camera via PoE Interface

Purpose:

PoE provides power to a network camera via the same cable as used for the network connection. Supported PoE camera number varies with device module. If you disable the PoE interface, you can also connect to the online network cameras. And the PoE interface supports the Plug-and-Play function.

Step 1 Connect an education specified PoE camera to a device PoE interface with network cable.


Step 2 Go to **Configuration > System Settings > Camera Management > SADP Search** via web browser.

Step 3 Edit the PoE camera IP address under 192.168.254.xxx network segment (for example, 192.168.254.123).

Step 4 Go to **Configuration > Recording Settings > Live View Settings > Live View Channel Settings**.

Step 5 Click **Add**.

Step 6 Enter the PoE camera parameters.

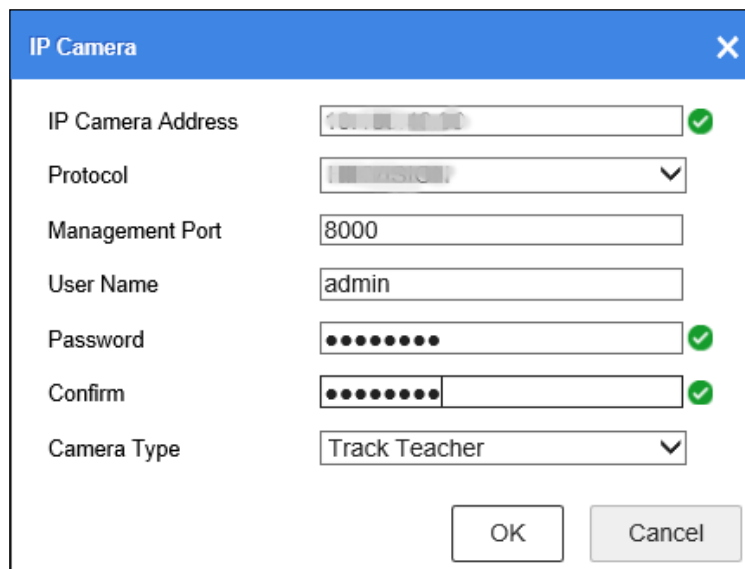A screenshot of a web-based configuration window titled "IP Camera" with a blue header and a close button (X) in the top right corner. The window contains several input fields for configuring a camera. The "IP Camera Address" field has a green checkmark to its right. The "Protocol" field is a dropdown menu. The "Management Port" field contains the value "8000". The "User Name" field contains the value "admin". The "Password" field is masked with dots and has a green checkmark to its right. The "Confirm" field is also masked with dots and has a green checkmark to its right. The "Camera Type" field is a dropdown menu with "Track Teacher" selected. At the bottom right of the window are two buttons: "OK" and "Cancel".

IP Camera Address		✓
Protocol		▼
Management Port	8000	
User Name	admin	
Password		✓
Confirm		✓
Camera Type	Track Teacher	▼

Figure 2-5 Add PoE Camera

Step 7 Click **OK**.



Camera type cannot be duplicated with each other.

2.6.2 Connect via Network

Before you start:

Connect the education specified camera to network.

Step 1 Go to **Configuration** › **Recording Settings** › **Live View Settings** › **Live View Channel Settings** via web browser.

Live View Channel Setti...									Add	Modify	Delete	Custom P...	Activation
☐	Channel No.	Camera Name	IP Address	Management Port	Camera Type	Priority	Status	Protocol					
☒	A1	Teacher		8000	Track Teacher	0	Offline						
☒	A2	Student		8000	Track Student	0	Offline						
☒	A3	TeacherFull		8000	Teacher Overall...	0	Offline						

Figure 2-6 Live View Channel Settings

Step 2 Click **Add** to add IP camera.

Step 3 Enter the camera parameters.



Camera type cannot be duplicated with each other.

IP Camera

IP Camera Address

✓

Protocol

▼

Management Port

8000

User Name

admin

Password

••••••••

✓

Confirm

••••••••

✓

Camera Type

Track Teacher

▼

OK

Cancel

Figure 2-7 Add IP Camera

Step 4 Click **OK**.

2.7 Wizard Configuration

Purpose:

The wizard is used to quickly view system information and configure system main parameters.

Step 1 Go to **Configuration › Wizard Configuration › Step 1** via web browser.

- **System Info:** View the device model, software version, and connected PoE camera information.
- **Audio Configuration:** Audio mode and audio gain is configurable. You can get the description of each audio mode in pop-ups. Refer to *5.2.7 Sound Mix Settings* for details about audio gain.
- **Interaction Platform Management:** Interaction platform parameters are configurable if you have the device logged into a platform. After your device logged in to a platform, the parameters would not be configurable.
- **Interaction Account Management:** You can log in or log out your interactive meeting account. Refer to *6.1.1 Account Management* for details.

Step 2 Go to **Configuration › Wizard Configuration › Step 2** via web browser. The live view strategy is configurable. Refer to *5.2.3 Automatic Live View Control* for details.

Chapter 3 Live View

3.1 Live View via Web Browser

Purpose:

You can view the live image of connected cameras with manual, semi-auto, or auto mode.

Before you start:

Ensure the device has successfully connected to the education specified cameras, and your web browser has installed the latest web component.

Step 1 Go to **Live View** via web browser.

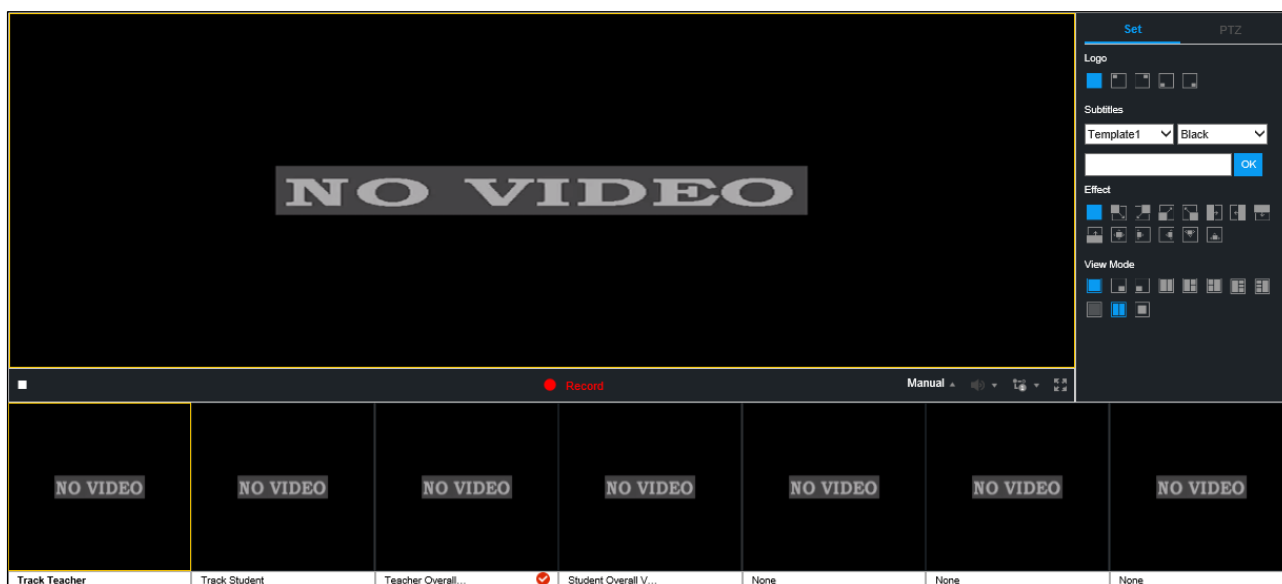


Figure 3-1 Live View

Step 2 Click **Set** to set the view mode.

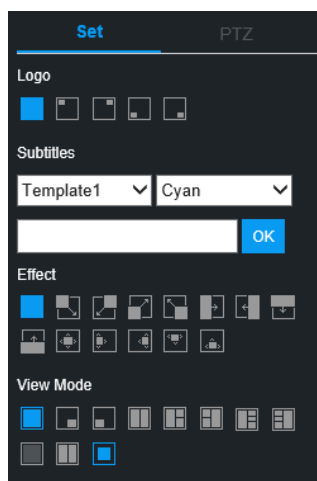


Figure 3-2 View Mode

Table 3-1 View Mode Description

Mode	Icon	Description
Movie		Single screen
Picture-in-Picture		PIP 1, overlay the picture at the lower right corner
		PIP 1, overlay the picture at the lower left corner
Multi-Screen		Multi-Screen 1, split screen in half
		Multi-Screen 2, split screen in three blocks with the larger one at left side
		Multi-Screen 3, split screen in three blocks with the larger one at right side
		Multi-Screen 4, split screen in four blocks with the larger one at left side
		Multi-Screen 5, split screen in four blocks with the larger one at right side

Step 3 Optionally, when you are in single screen, you can double-click the windows at the bottom to switch live view camera.

Step 4 Optionally, click or to start/stop course recording. You shall enter the course information when you start course recording.

- 1) Enter course information including **Course Name**, **Teacher**, and **Course Introduction**.
- 2) You can check **Video Head** or **Video Trailer** to add video head or tail to the recording video. Refer to *5.4 Video Head/Tail Configuration* for details.
- 3) Click **OK**.

Figure 3-3 Course Information

Step 5 Optionally, select the live mode as **Manual**, **SimiAuto**, or **Auto**.

- **Manual:** Manually switch the camera image to the main screen. You can double-click the camera image at the bottom to switch image, or use the PTZ control panel to manually track the object.
- **SimiAuto:** The speed dome can automatically track object, but you still have to manually switch live view image by double-clicking the camera display window at the bottom.
- **Auto:** The speed dome can automatically track object. The device will automatically display image to the main screen when the connected education specified cameras have detected smart events. The auto live view control is enabled by default.

Step 6 Optionally, for the student and teacher channel, click **PTZ** to rotate the camera to desired view. Refer to *3.3 PTZ Control* for details.



Figure 3-4 PTZ Control Panel

3.2 Live View via Local Menu

Purpose:

You can view the live image of connected cameras on the device screen.

Step 1 Tap **Course Recording** after login.

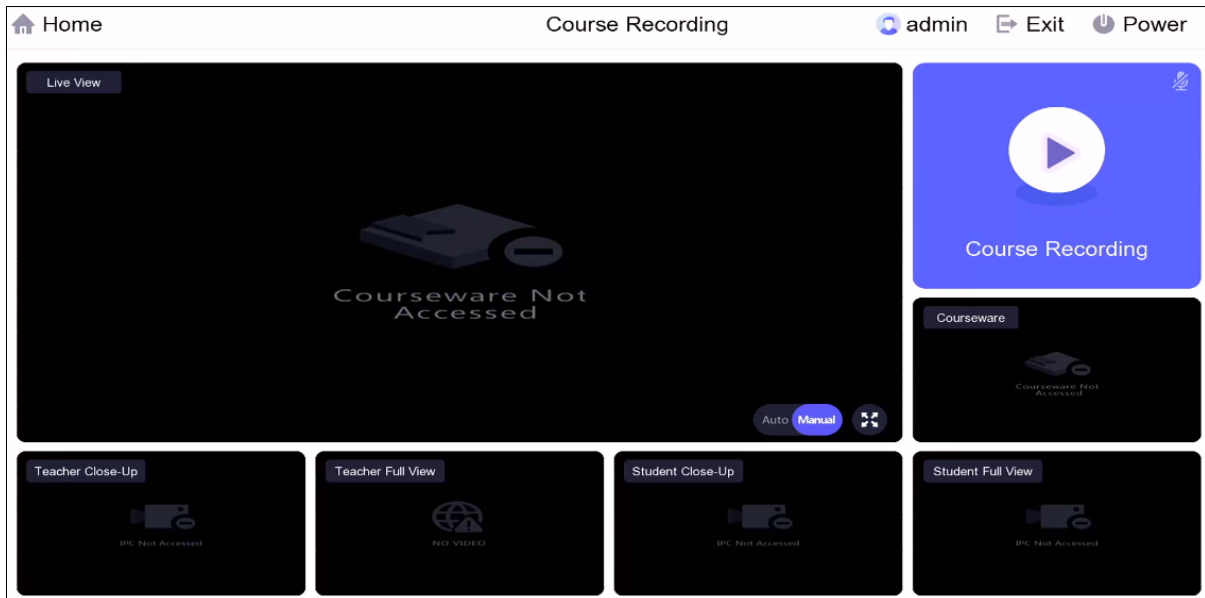


Figure 3-5 Live View via Local Menu

Step 2 Optionally, select the live mode as **Manual**, or **Auto**.

- **Manual**: Manually switch camera image to the main screen. You can tap the camera image at the bottom to switch.
- **Auto**: The speed dome can automatically track object. The device will automatically display image to the main screen when the connected education specified cameras have detected smart events.

Step 3 Optionally, tap  to view the full image of live view.

Step 4 Optionally, tap **Course Recording** to record course live videos. The course recording videos are configurable, refer to *5.1 Configure Recording Parameters via Local Menu* for details.

- 1) Enter the course information, including **Course Name** and **Course Teacher**.
- 2) Click **OK**, and the device starts to record.
- 3) Tap **Pause Recording** or **Stop Recording** to pause/stop course recording.
- 4) After course recording is stopped, you can tap **View Video** to view the recorded videos.

3.3 PTZ Control

3.3.1 PTZ Settings

Purpose:

For the student and teacher channel, you can rotate them to desired view.

Follow the procedure to set the parameters for PTZ. The configuring of the PTZ parameters should be done before you control the PTZ camera.

Step 1 Go to **Configuration > System Settings > System Settings > RS-485** via web browser.

Figure 3-6 PTZ Settings

Step 2 Select the camera for PTZ setting in **Channel No.**

Step 3 Set the PTZ camera parameters.



NOTE

All the parameters should be the same as the PTZ camera parameters.

Step 4 Click **Save** to save the settings.

3.3.2 Set PTZ Presets

Purpose:

Follow the steps to set the preset position location which you want the PTZ camera to point to when an event takes place.

Step 1 Go to **Live View** via web browser. And start live view of a channel.

Step 2 Click **PTZ** at the upper right corner.

Step 3 Select a preset.

Step 4 Use the directional button to wheel the camera to the location where you want to set preset. The zoom and focus operations can be recorded in the preset as well.

Step 5 Click  to save the preset.



Figure 3-7 Select a Preset



Repeat the above steps to set more presets.

3.3.3 Call Presets

Purpose:

This feature enables the camera to point to a specified position such as a window when an event takes place.

Step 1 Go to **Live View** via web browser. And start live view of a channel.

Step 2 Click **PTZ** at the upper right corner.

Step 3 Select the preset you want to call.

Step 4 Click  to call the preset.

Chapter 4 HDD Management

4.1 Format Hard Disk

Purpose:

A newly installed hard disk must be formatted before it can be used by your education sharing system.

Step 1 Go to **Configuration > System Settings > Storage Management > HDD Management** via web browser.

Step 2 Select the HDD(s) you want to format.

Step 3 Click **Format** to start formatting.

4.2 Manage Network Hard Disk

Purpose:

You can add the allocated NAS or disk of IP SAN to the education sharing system, and use it as a network hard disk. Up to 8 network hard disks can be added.

Step 1 Go to **Configuration > System Settings > Storage Management > NetHDD** via web browser.

Net HDD				Search
HDD No.	Server Address	File Path	Type	Delete
1			NAS	×
2			NAS	×
3			NAS	×
4			NAS	×
5			NAS	×
6			NAS	×
7			NAS	×
8			NAS	×

Figure 4-1 NetHDD Settings

Step 2 Enter **Server Address** and **File Path**.

Step 3 Optionally, click **Search** to get the NetHDD file path by its type and server address.

Step 4 Select the NetHDD type.

Step 5 Click **Save** to save the settings.

4.3 Set Cloud Storage

Purpose:

The cloud storage allows you to get alarm pictures from the device.

Step 1 Go to **Configuration > System Settings > Storage Management > Cloud Storage** via web browser.

Step 2 Check **Enable Cloud Storage**.

Step 3 Set the related parameters.

Step 4 Click **Save**.

4.4 Record Schedule Settings

Step 1 Go to **Configuration > System Settings > Camera Management > Record Schedule** via web browser.

Step 2 Select **Channel No.**

Step 3 Check **Enable**.

Step 4 Select the recording type, including **Continuous**, **Motion**, **Alarm**, **Motion | Alarm**, **Motion & Alarm**, and **Event**.

Step 5 Set the recording schedule of selected day.

Step 6 Optionally, you can click **Copy to** to copy the schedule settings to other channel(s).

Step 7 Optionally, click **Advanced** to set the pre-record and post-record time of the recording schedule, and expired time of the recording file.

Step 8 Click **Save**.

The screenshot shows the 'Record Schedule' configuration page for Channel [A1] Teacher. The 'Enable' checkbox is checked. The recording type is set to 'Continuous'. Below this, there are seven horizontal bars representing the days of the week (Mon to Sun). Each bar has a time scale from 0 to 24 hours. The 'Continuous' recording type is selected for all days. At the bottom, there are buttons for 'Copy to...' and 'Save'. A legend on the right side lists the recording types: Continuous (blue), Motion (green), Alarm (red), Motion | Alarm (orange), Motion & Alarm (light blue), and Event (purple).

Figure 4-2 Schedule Settings


4.5 Advanced Settings

4.5.1 HDD Sleeping

Purpose:

To reduce consumption and extend hard disk's lifespan, you can enable the hard disk sleep feature. The hard disk will turn into sleep status if it keeps idle for a period.

Step 1 Go to **Configuration > System Settings > Storage Management > Advanced Configuration** via web browser.

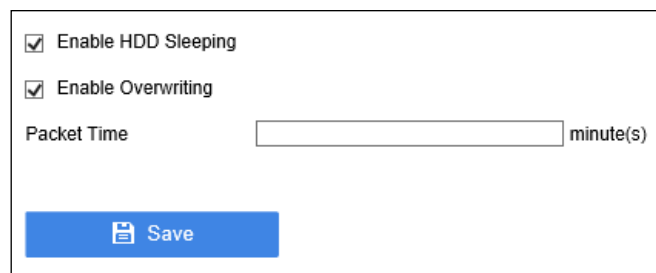

The screenshot shows a configuration interface with two checked checkboxes: "Enable HDD Sleeping" and "Enable Overwriting". Below these is a "Packet Time" label followed by a text input field and the unit "minute(s)". At the bottom is a blue "Save" button with a floppy disk icon.

Figure 4-3 Advanced Configuration

Step 2 Check **Enable HDD Sleeping**.

Step 3 Click **Save** to activate the feature.

4.5.2 Overwriting

Purpose:

When the hard disk is full, the overwriting function will keep writing data into the hard disk by replacing its previous data.

Step 1 Go to **Configuration > System Settings > Storage Management > Advanced Configuration** via web browser.

Step 2 Check **Enable Overwriting**.

Step 3 Click **Save** to save the settings.

Chapter 5 Recording Settings

5.1 Configure Recording Parameters via Local Menu

The recording channels are configurable in **System Settings > Record**. The device **Recording Channel** is set to **Live View Channel** by default. You can choose to record multiple channel during live view as your desire.

If you forget to stop recording, the device will automatically stop it according to **Manual Recording Auto Stop Time**. You can configure **Manual Recording Auto Stop Time** as your desire.

5.2 Configure Live View Control Parameters via Web Browser

5.2.1 Manage Background Picture

Purpose:

When the live view control view is set as multi-screen 1, multi-screen 2, or multi-screen 3, in case the collaged image cannot fill in the whole screen and leaves the screen top and bottom filled in black bar, you can upload a background picture to span the whole screen.

Before you start

Ensure you have installed a hard disk to the device.

Upload Image

Step 1 Go to **Configuration > Recording Settings > Auxiliary Settings > Picture Upload** via web browser.

*Uploaded pictures can be used for background, video opening and ending settings. Only JPEG picture is supported, and the resolution shall be between 352 × 288 and 1920 × 1080.

Image No.	File Name	File Size	Picture Type	Picture Width	Picture Height	Operation Item

Figure 5-1 Background Settings

Step 2 Click **Upload Picture** to upload a picture.



NOTE

- Only JPEG format pictures can be uploaded, and the resolution shall be between 352 × 288 and 1920 × 1080.
- Up to 11 pictures can be uploaded.

Step 3 Click **OK**.

Step 4 Optionally, you can click  to delete the picture. But you cannot delete the background picture that is in usage.

Set Background Picture

Step 1 Go to **Configuration > Recording Settings > Auxiliary Settings > Background Settings** via web browser.

Step 2 Check **Enable Background Overlay**.

Step 3 Check the live view control view that requires to overlay background image. Only multi-screen is available.

Step 4 Select background image for the multi-screen.

Step 5 Click **Save**.

5.2.2 Courseware Detection

Set Courseware Detection

Purpose:

If auto live view control is enabled, once multimedia change is detected, education sharing system will automatically switch to multimedia channel.

Step 1 Go to **Configuration > Recording Settings > Courseware Settings > Courseware Settings** via web browser.

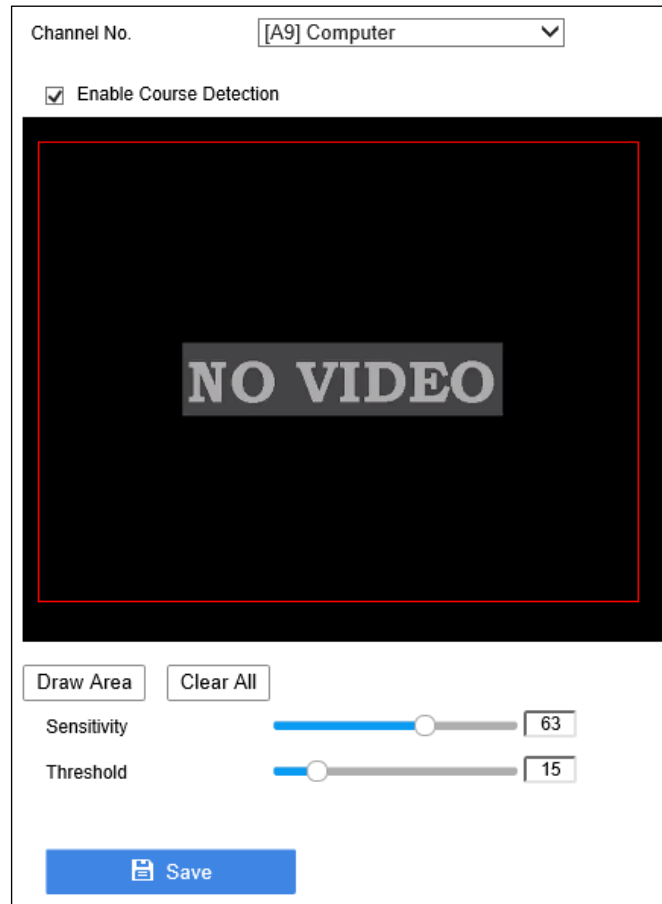


Figure 5-2 Courseware Detection

Step 2 Select **Channel No.** for course detection. **[A9] Computer** and **[A10] Computer** refer to VEDIO IN 1 and VEDIO IN 2 at the rear panel respectively.

Step 3 Check **Enable Course Detection**.

Step 4 Click **Draw Area** to draw the detection area in the camera view.

Step 5 Click **Stop Drawing** when you finish drawing the detection area.

Step 6 Optionally, you can click **Clear All** to delete the drawing area.

Step 7 Set **Sensitivity** and **Threshold** of course detection.

- **Sensitivity:** Sensitivity refers to the how much the detection area pixels change.
- **Threshold:** Threshold refers to how many pixels are changing.

Step 8 Click **Save** to save the settings.

Configure Courseware Input Source

Purpose:

The device can automatically detect the courseware input source at startup. You can configure the input source as your desire.


Step 1 Go to **Configuration > Recording Settings > Courseware Settings > Input Source Configuration** via web browser.

Step 2 Select **Channel No.** for input source. **[A9] Computer** and **[A10] Computer** refer to VEDIO IN 1 and VEDIO IN 2 at the rear panel respectively.

Step 3 Select **Input Source**. The device can automatically detect the courseware input source if you select **Auto**.

 NOTE

When **Input Source** is set as **Auto**, and both HDMI and VGA signal source have been detected, the device will choose HDMI as its priority input source.

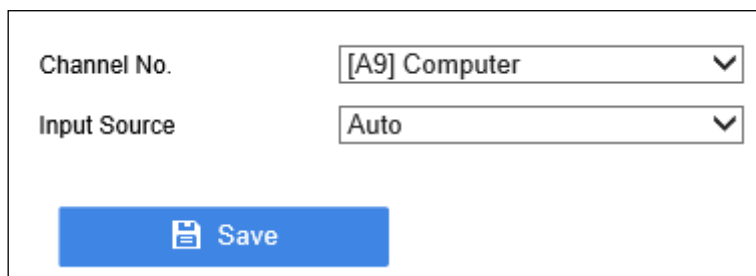

 
Channel No.	[A9] Computer ▼
Input Source	Auto ▼
	

Figure 5-3 Input Source

Step 4 Click **Save**.

5.2.3 Automatic Live View Control

Purpose:

Combined with education specified speed dome and detection camera (including teacher close shot camera, student close shot camera, and multimedia camera), education sharing system can automatic display the teacher image, student image, or HDMI/VGA multimedia image in live view control view according to the speed dome smart detection information. Besides, the speed dome can preciously positioning and track teacher and record the teaching process.

 NOTE


- Connect education specified speed dome and detection to education sharing system via network. For detailed steps, refer to *2.6.1 Connect Network Camera via* .
- In auto live view control mode, when the education specified speed dome occurs smart events or HDMI/VGA multimedia courseware changes, the cameras will be automatically

displayed in the resource channel in the largest window of live view control view according to the set priority.

- You need to log in education specified speed dome configuration interface to configure its smart detection rules.

Configure Live View Control View

Step 1 Go to **Configuration > Recording Settings > Live View Settings > View Settings** via web browser.

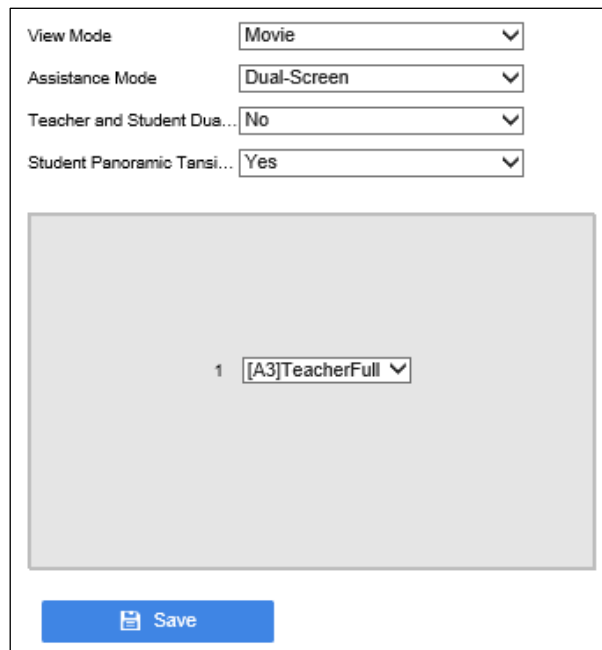

The screenshot displays the 'Live View Control View' configuration window. It contains four dropdown menus at the top: 'View Mode' set to 'Movie', 'Assistance Mode' set to 'Dual-Screen', 'Teacher and Student Dual-Screen' set to 'No', and 'Student Panoramic Transition' set to 'Yes'. Below these is a large gray rectangular area. In the center of this area is a small dropdown menu with the label '1' and the selected option '[A3]TeacherFull'. At the bottom of the window is a blue button with a floppy disk icon and the text 'Save'.

Figure 5-4 Live View Control View

Step 2 Select **View Mode**.

- **Movie:** You need to set **Assistance Mode** for movie mode. When one alarm is triggered, it will display in single screen. But if two or more alarms are triggered, it will display as what the **Assistance Mode** is set, including **Single Screen**, **Dual-Screen**, and **Picture-in-Picture**.
- **PiP:** PiP (Picture-in-picture) is the video display method that when the video is on full screen, another video is displayed in the inset window at the same time.
- **Multi-Screen:** Multi-image of the camera are displayed simultaneously on the screen.

Step 3 Select display channel.

Step 4 Click **Save**.

Configure Live View Control Strategy

Step 1 Go to **Configuration > Recording Settings > Live View Settings > Live View Channel Settings** via web browser.

Live View Channel Setti...								
☐	Channel No.	Camera Name	IP Address	Management Port	Camera Type	Priority	Status	Protocol
☐	A1	Computer		8000	Multimedia	1	Offline	
☐	D1	Camera 01		8000	Teacher Overall...	0	Online(Get Stream)	http.i. ...

Figure 5-5 Live View Channel Settings

Step 2 Select a channel for modification.

Step 3 Click **Modify**.

Priority	0
IP Address	
Management Port	8000
User Name	admin
Password	*****
Channel Display Time (s)	0
Camera Type	Track Student
OK Cancel	

Figure 5-6 Strategy Configuration Interface

Step 4 Set the parameters, including priority, IP address, port, user name, password, etc.

- **Priority:** The priority of the selected channel. The larger the value is, the higher the priority will be.
- **Channel Display Time (s):** The display time of multimedia is recommended to set as its actual duration. Other channel's display time is recommended to set as 0. Valid channel display time range: [0, 900].

Step 5 Click **OK** to save the settings.

Configure One-Touch Configuration

Step 1 Go to **Configuration > Recording Settings > Live View Settings > Live View Strategy Settings** via web browser.

Step 2 Click **Add**.

Step 3 Enter the channel parameters of live view control strategy.

Step 4 Click **OK**.

Step 5 Click **One-touch Configuration**.

 NOTE

The device will automatically recognize supportable education specified cameras. If issues occur, contact the product distributor for help.

5.2.4 Course Information

Purpose:

You can define the course number, course name, and course instructor.

Step 1 Go to **Configuration > Courseware Settings > Course Settings > Course Information** via web browser.

Step 2 Edit the course information including name, teacher, etc.

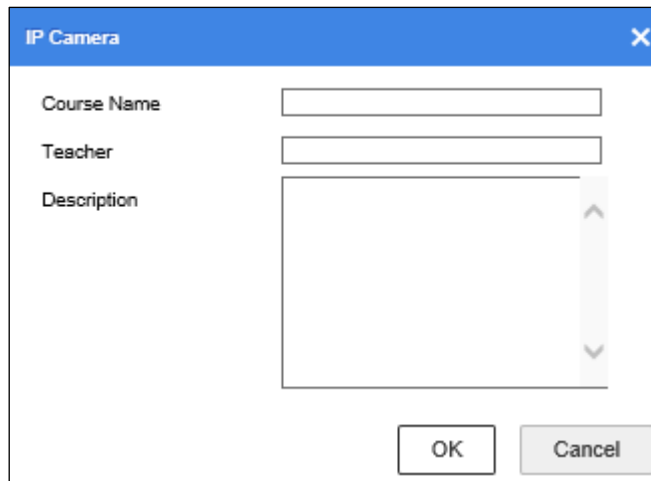
A screenshot of a web-based dialog box titled "IP Camera" with a close button (X) in the top right corner. The dialog contains three input fields: "Course Name" (a single-line text box), "Teacher" (a single-line text box), and "Description" (a multi-line text area with a vertical scrollbar on the right). At the bottom right of the dialog are two buttons: "OK" and "Cancel".

Figure 5-7 Course Information

Step 3 Click **OK**.

5.2.5 Course Plan

Purpose:

You can set the course recording plan as your desire.

Before you start:

Course plan is saved in hard disk. So you need to install at least one hard disk and format it.

Step 1 Go to **Configuration > Courseware Settings > Course Settings > Course Plan** via web browser.

Step 2 Select year and week for the plan.

Step 3 Set the recording schedule for each day in the week.

Step 4 Optionally, click **Copy to** to copy the recording schedule to other week.

Select Year: 2018

Select Week: 2018-09-17 ~ 2018-09-23 (we)

✖ Delete 🗑 Delete All

	0	2	4	6	8	10	12	14	16	18	20	22	24
Mon													
Tue													
Wed													
Thu													
Fri													
Sat													
Sun													

📄 Copy to... 💾 Save

Figure 5-8 Course Plan

Step 5 Click **Save**.

5.2.6 RTMP Live

Purpose:

You can view the course live view image in RTMP server. The feature is turned off by default.

Step 1 Go to **Configuration > System Settings > Network Settings > RTMP Live** via web browser.

Channel No.: [A1] Computer

☐ Enable

Stream Type: Main Stream

RTMP URL1: ☐ Enable

RTMP URL2: ☐ Enable

RTMP URL3: ☐ Enable

Package Length: 8192

💾 Save

Figure 5-9 RTMP Live

Step 2 Select **Channel No.**

Step 3 Check **Enable** to enable the RTMP live feature.



Network camera supports push main stream and sub-stream.

Step 4 Edit **Stream Type**, **RTMP URL**, and **Package Length**.



- RTMP URL format: rtmp://192.168.1.64:1935/live/12345. 192.168.1.64 is the server IP address. 1935 is server port. Live is server name. 12345 is a custom name used to distinguish channels and stream types.
- Valid package length range: [1024, 8192]. Package length is 8192 by default and is a recommended value.

Step 5 Click **Save**.

5.2.7 Sound Mix Settings

Purpose:

You can configure the sound mix parameters, including output volume, input volume, and audio gain.

Step 1 Go to **Configuration > Audio/Video > Mix Settings** via web browser.

Step 2 Click **Output Volume** to view and set audio volume.

Figure 5-10 Audio Volume

Step 3 Click **More Configure > Advance Gain**.

Step 4 Set the audio gain. Audio gain adjusts the input audio, after the adjustment, the mixed sound will be applied to the audio output at rear panel. The gain value ranges from 1 to 100. When it is set as 1, the audio gain reaches to the minimum, and when it is set as 100, it reaches to the maximum.

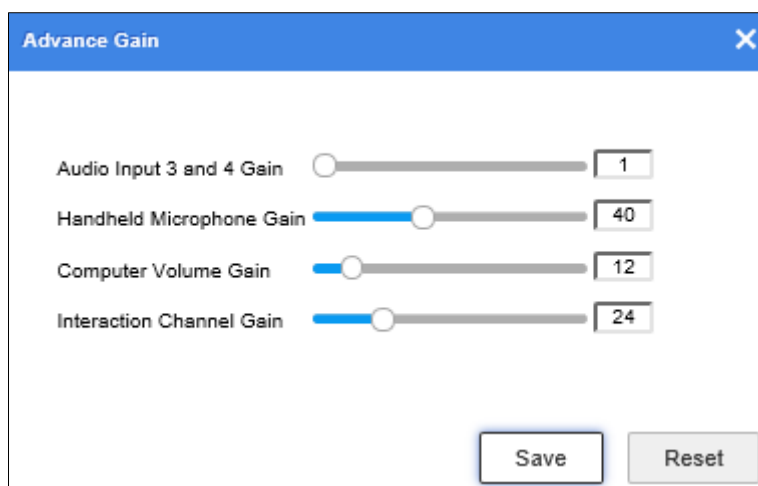


Figure 5-11 Advanced Gain

Step 1 Click **Save**.

5.3 Course Publishing

5.3.1 Publish Course

Purpose:

The recorded courses can be automatically published to FTP server.

Step 1 Go to **Configuration > System Settings > FTP Publishing > Publish Configuration** via web browser.

Server Protocol: FTP

Server Address:

Port: 21

User Name:

Password:

Confirm:

Publish: Set

Publishing Path: Custom

☐ Auto Publishing

Date Published: Custom 0:0

Save

Figure 5-12 Publishing Configuration

Step 2 Enter the FTP server address, port, user name, and password.

Step 3 Click **Set** to select the publishing channel(s).

Step 4 Click **OK**.

Default Publishing Channel

☐ Select All

☐ A1

☐ A2

☐ A3

☐ A4

☐ A5

☐ A6

☐ A7

☐ A8

☐ A9

☐ A10

OK

Figure 5-13 Set Publishing Channel

Step 5 Set **Publishing Path**.

Step 6 Optionally, check **Auto Publishing** to automatically publish courses. You can set **Date Published** as **Last Course** or **Custom time** for the course that requires to be published to FTP.

Step 7 Click **Save** to save the settings.



The published course video format is MP4.

5.3.2 Search Published Course

Purpose:

After course is published, you can search its publishing progress, publishing status, course introduction.

Step 1 Go to **Configuration > System Settings > FTP Publishing > Published Course Search** via web browser.

Channel No.	[M1] Direct						
Select Year	2018						
Select Week	2018-09-17 ~ 2018-09-23 (we)						
		Search		Cancel Publishing			
No.	Start Time	End Time	Course Name	Teacher	Progress	Published Status	Course Introduction

Figure 5-14 Search Published Course

Step 2 Select channel, year, and week.

Step 3 Click **Search**.



When multiple courses are waiting to be uploading, to increase the uploading speed of high priority courses, you can cancel uploading of low priority courses.

5.4 Video Head/Tail Configuration

Purpose:

You can insert the picture at the beginning and ending of course video.

Before you start:

Upload background first. For detailed steps, refer to *5.2.1 Manage Background Picture*.

Step 1 Go to **Configuration > Recording Settings > Auxiliary Settings > Video Head/Tail Configuration** via web browser.

The screenshot displays a configuration window with two main sections: 'Video Head' and 'Video Tail'. Each section contains the following elements: an 'Enable' checkbox, a 'Background Picture Index' dropdown menu (currently showing 'None'), and a 'Display Duration' text input field (containing the number '5') followed by a small 's' for seconds. A blue 'Save' button is positioned below the input fields in each section.

Figure 5-15 Video Head/Tail Configuration

Step 2 Configure video head.

- 1) Check **Enable** under **Video Head**.
- 2) Enter **Background Picture Index**. The index No. is the background picture No. in the background settings interface.
- 3) Enter **Display Duration** for the background picture.
- 4) Click **Save**.

Step 3 Configure video tail.

- 1) Check **Enable** under **Video Tail**.
- 2) Enter **Background Picture Index**. The index No. is the background picture No. in the background settings interface.
- 3) Enter **Display Duration** for the background picture.
- 4) Click **Save**.

5.5 Logo Configuration

You can overlay logo image on the live view.



NOTE

The required logo picture format is *.jpeg* and *.jpg*, the resolution shall be smaller than 256 × 128, and file size shall be smaller than 80 KB.

5.5.1 Upload Logo

Step 1 Go to **Configuration > Recording Settings > Auxiliary Settings > Logo Configuration** via web browser.

Step 2 Click **Browse** to select the image path.

Step 3 Click **Save**.

5.5.2 Display Logo

Step 1 Go to **Configuration > Recording Settings > Auxiliary Settings > Logo Configuration** via web browser.

Step 2 Select **Channel No.** The logo will be displayed at the selected channel.

Step 3 Check **Display Logo**.

Step 4 Select **Logo Position** as your desire.

Step 5 Click **Save**.

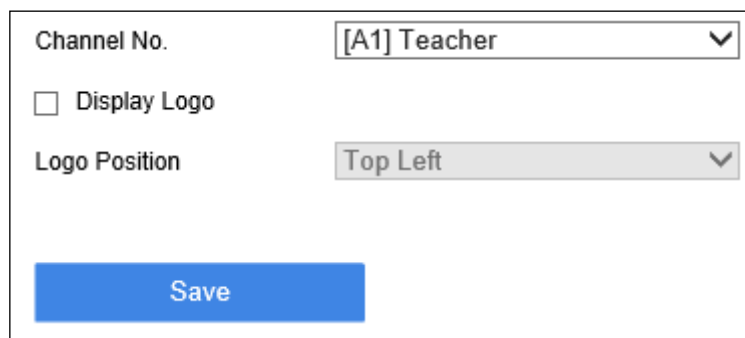
The image shows a web-based configuration form for displaying a logo. It contains three main sections: a dropdown menu for 'Channel No.' with '[A1] Teacher' selected, a checkbox for 'Display Logo' which is currently unchecked, and another dropdown menu for 'Logo Position' with 'Top Left' selected. At the bottom of the form is a blue rectangular button labeled 'Save'.

Figure 5-16 Display Logo

Chapter 6 Interaction

6.1 Interaction Settings

6.1.1 Account Management

Purpose:

You can manage your interactive meeting account in **Account Management**.

Step 1 Go to **Configuration > Interaction Settings > Cloud Interactive Class > Account Management** via web browser.

Step 2 Click **Current Login Account** to register the device (your device will log in automatically after registration. If you log out from the current account, you have to log in manually).

Step 3 Enter your user name and password. Click **login** to get access to the platform.

Step 4 Manage your account as required.

Table 6-1 Account Management Procedures

Item	Description
	Change your alias and phone number.
	Change account password.
	Exit current account.
Local Meeting No.	If the device initiates an interactive meeting, other devices shall use the meeting number to join in.
Alias	Alias is your device name, and other participants can find your meeting through it. You can click  to edit it. For example, it can be set as the class name.
Service Details	Check your account ID, start time and end time.
Top-up/Record	Top up or check your top-up records.

Step 5 Click **top-up**, fill in your card number and top up.

6.1.2 Configure Platform Parameters

Platform parameters are used for interaction. You can configure platform parameters in **Configuration > Interaction Settings > Cloud Interactive Class > Basic Settings** via web browser or **System Settings > System > Platform Management** via local menu.


Default settings are recommended. If the default parameters are invalid, please contact the installer or technical support service.

6.1.3 Configure Interactive Video Linkage

Purpose:

You can configure Interactive Video Linkage in the interaction view.

Step 1 Go to **Configuration > Interaction Settings > Cloud Interactive Class > Interactive Video Linkage** via web browser.

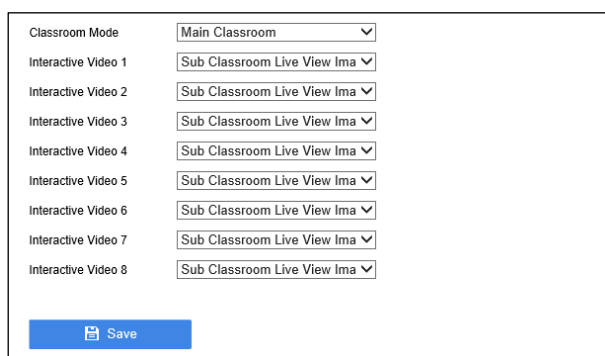

Classroom Mode	Main Classroom
Interactive Video 1	Sub Classroom Live View Ima
Interactive Video 2	Sub Classroom Live View Ima
Interactive Video 3	Sub Classroom Live View Ima
Interactive Video 4	Sub Classroom Live View Ima
Interactive Video 5	Sub Classroom Live View Ima
Interactive Video 6	Sub Classroom Live View Ima
Interactive Video 7	Sub Classroom Live View Ima
Interactive Video 8	Sub Classroom Live View Ima

Save

Figure 6-1 Interactive Video Linkage

Step 2 Set your classroom mode as **Main Classroom** or **Sub Classroom**.

Step 3 Select classroom live view image of the interactive video accordingly.



You can go to **Configuration > Interaction Settings > Cloud Interactive Class > Interaction View** to set the position of interactive video in the interaction view.

6.1.4 Configure Interaction View

Purpose:

You can configure the view mode and the channels of the individual interaction view.

Step 1 Go to **Configuration > Interaction Settings > Cloud Interactive Class > Interaction View** via web browser.

Figure 6-2 View Configuration

Step 2 Select **Network Mode**.

- **Auto Mode:** If no view is provided by other recorder, default view mode would be single screen. Otherwise, it will add new view automatically and switch to multi-screen.
- **Manual Mode:** This mode shows multi-screen view and can match the interactive video with the required view. You can set the presentation of the interactive video if you go to **Configuration > Interaction Settings > Cloud Interactive Class > Interactive Video Linkage**.

Step 3 Click and set the channel of each view.

Figure 6-3 Channel Selection

Step 4 Click **Save**.

NOTE

- The screenshots are for reference only, the optional channel is subject to the actual device conditions.
- If the view channel is null, it will present black screen.

6.1.5 Sending Channel Encoding Settings

Purpose:

You can configure the main stream parameters of the sending channels.

Go to **Configuration > Interaction Settings > Cloud Interactive Class > Sending Channel > Advanced Configuration** via web browser.

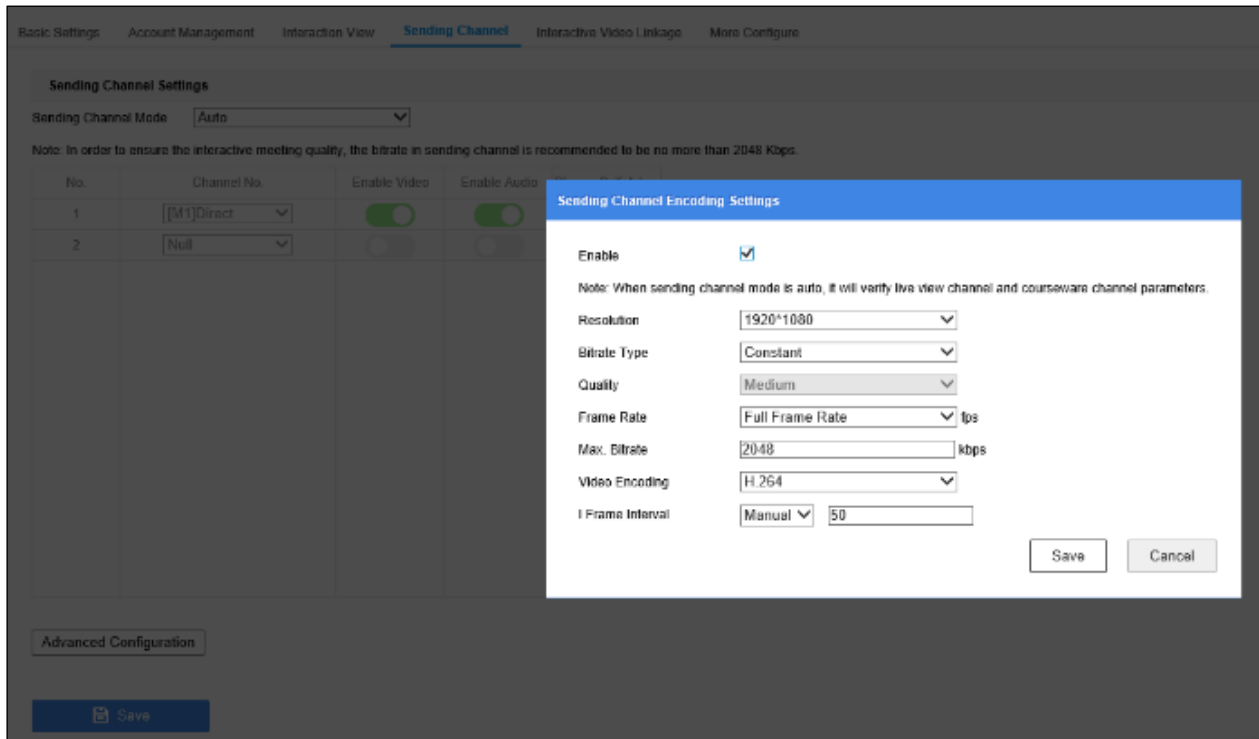


Figure 6-4 Sending Channel Code Configuration

Table 6-2 Parameter Description

Parameter Name	Parameter Description
Resolution	Indicates image precision. The higher the resolution, the clearer the image.
Bitrate Type	Variable Bitrate: Bitrate varies according to the scenarios. 6 levels of image quality are available. You can have higher usage of network bandwidth and higher efficiency of storage space. If the video encoding is H.265 and the Bitrate Type is variable, the system would adopt H.265 Pro format.
Quality	Only adjustable when Bitrate Type is set as Variable .
Frame Rate	Indicates video frame rate per second. The higher the frame rate, the higher the consistency of the video. Default setting is recommended.
Max. Bitrate	A reference number that indicates Max. Bitrate of the video encoding. The higher the Max. Bitrate, the better the video quality. Default setting is recommended. If you have to edit it for better video quality, resolution is suggested to be adjusted together.
Video Encoding	Video encoding format depends on specific camera.
I Frame Interval	You can improve its consistency in video loss by setting I Frame Interval. Generally, you do not need to adjust this setting, and default setting is recommended.

**NOTE**

The main stream parameters of the sending channels are only effective if configured in Sending Channel Encoding Settings but not in **Audio/Video > Video Settings**.

6.1.6 Configure Sending Channel

Purpose:

You can configure the interactive image parameters, and the image will be sent to the interactive meeting.

Step 1 Go to **Configuration > Interaction Settings > Cloud Interactive Class > Sending Channel** via web browser.

No.	Channel No.	Enable Video	Enable Audio	Stream Self-Ad...
1	[M1]Direct	☒	☒	☒
2	Null	☐	☐	☐

Figure 6-5 Configure Sending Channel

Stream Self-Adaption is recommended. If this function is enabled, it will adjust video bitrate automatically according to the network performance.

**NOTE**

- If the **Sending Channel Mode** is **auto**, the parameters can not be configured. The courseware channel and the broadcast channel are sent by default. Meanwhile, the main stream, video, audio and **Stream Self-Adaption** are applied by default.
- As the channel No. and the stream cannot be configured during the interaction process, please configure them before the interaction starts.
- Audio can be enabled or controlled only after the video is enabled.
- After enabling the video and audio, if the host is the initiator, /  will be available to initiate or stop the sending process, while if the host is the participant, the device will send the video or audio by default, but it cannot stop the sending process.

Step 2 Click **Advanced Configuration** to configure the sending channel No.

6.1.7 Configure Meeting Room Permission

Purpose:

You can configure the meeting room permission (direct participation or participation with verification code).

Step 1 Go to **Configuration > Interaction Settings > Cloud Interactive Class > Basic Settings > Meeting Room Management** via web browser.

Step 2 Select **Meeting Room Permission**.

Step 3 If you select encrypted meeting room permission, you should configure the verification code.

**NOTE**

After you complete the configuration, verification code is required when other devices join in the interactive meeting that initiated by the host.

6.1.8 Configure Course Output

Purpose:

You can configure the course output.

Go to **Configuration > Interaction Settings > Cloud Interactive Class > More Configure > Course Output** via web browser.

If HDMI and VGA offer simultaneous video output, both HDMI or VGA provide the video of your course; if they offer independent output, the course output can be set manually. By default, VGA can provide access to both main room courseware and the sub room courseware, and this default setting can also be switched to HDMI output.

6.1.9 Overlay Interactive Alias

Purpose:

You can overlay interactive alias on the image of sending channels.

Step 1 Select **Configuration > Interaction Settings > Cloud Interactive Class > Basic Settings > Interactive Alias Overlay** via web browser.

Step 2 Check **Enable** and set **Overlay Position**.

6.1.10 Interactive Course Data Counting

Purpose:

Course data counting is available. Statistics such as head rise data and question frequencies.

Go to **Configuration > Interaction Settings > Cloud Interactive Class > More Configure > Interactive Course Data Counting** via web browser to enable this function. You can check the counting result on the platform.

6.1.11 Network Status Counting

Purpose:

The interactive view can show network status, and you can configure **Current Packet Loss Rate Counting Time Interval** with this function.

Go to **Configuration > Interaction Settings > Cloud Interactive Class > More Configure > Network Status Counting** via web browser to input required intervals, from 1-1000.

6.1.12 Interactive Facial Image Live View

Purpose:

When teacher stands in front of the interactive screen, the live view will switch to the facial image of the teacher.

Step 1 Go to **Configuration > Recording Settings > Live View Settings > Live View Strategy Settings** via web browser.

Step 2 Set **Configuration Mode** as **Auto Configuration**.

Step 3 Go to **Configuration > Recording Settings > Live View Settings > Live View Channel Settings**.

Step 4 Click **Add**.

Step 5 Set **Camera Type** as **None**.

Step 6 Set other camera parameters as required.

Step 7 Click **OK**.

6.2 Interaction Operation

The device supports multi-room interaction. You can preview the cloud interactive image via web browser or local menu, and control the device.

6.2.1 Join/Initiate Interaction via Web Browser

Before you start

- Configure interactive meeting parameters (Go to **Configuration > Interaction Settings > Cloud Interactive Class** via web browser).
- Turn off video meeting.
- The device has been registered, logged in and topped up.

Step 1 Click **Interaction**.

Step 2 Initiate or join a meeting.



NOTE

The initiator can ask questions to the participant or remove the participant. The meeting No. filled in by participant is the device meeting No. (can be obtained from the initiator, on the web page of the host **Configuration > Interaction Settings > Cloud Interactive Class > Account Management**).

Step 3 Complete the configuration accordingly.

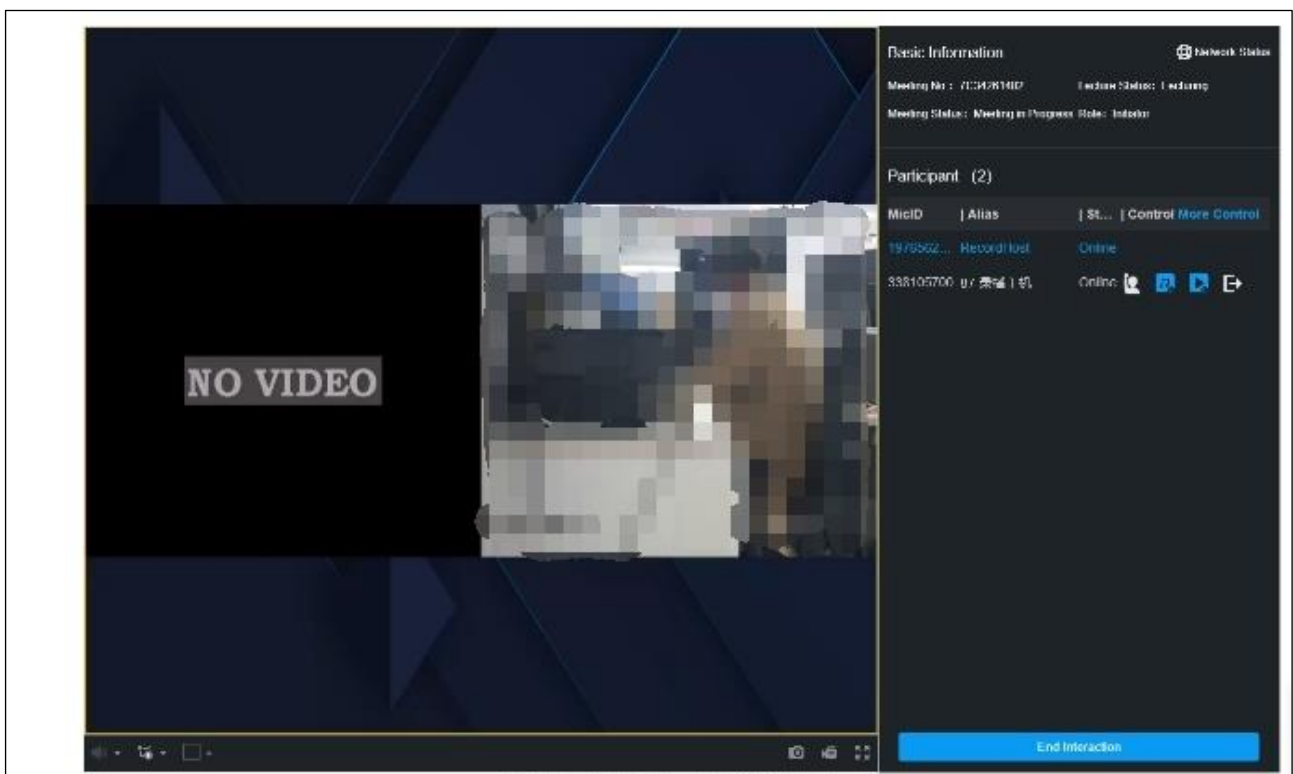


Figure 6-6 Interaction

More Control			
MicID	Alias	Status	Control
1976562079	RecordHost	Online	
338105700		Online	      

Figure 6-7 More Control

Table 6-3 Interaction and Other Procedures

Icon	Description	Remarks
	Adjust view mode.	This function is only available when the view mode is 'manual' (Go to Configuration > Interaction Settings > Cloud Interactive Class > Interactive View).
	Capture current view.	Go to Configuration > System Settings > System Settings > WEB Config > Save Snapshots in Live View to.
	Start recording.	Go to Configuration > System Settings > System Settings > WEB Config > Save Record Files to .
	Control button of the participant list. Function is as same as the more control.	Blue indicates on, white indicates off, grey indicates channel is offline and unavailable.
	Click and you can control more options.	Null.
	Receive audio. To receive or decline the audio sent by	Blue indicates on, black indicates off, grey indicates channel is offline and unavailable.

Icon	Description	Remarks
	the participant. Only available when video stream is enabled.	
	Receive video stream. To receive or decline the audio and video sent by the participant.	
	Ask question. The initiator can ask questions to the participant, when you go to Configuration > Interaction Settings > Cloud Interactive Class > Interactive View , select auto mode and enable this function.	Only available for initiators. Blue indicates on, black indicates off, grey indicates channel is offline and unavailable.
	Receive audio. To receive or decline the audio sent by the participant. Only available when video is enabled.	
	Receive video. To receive or decline the audio and video sent by the participant.	
	To show or hide student name in the meeting room. Only available when individual behavior analytics is configured and when the camera	

Icon	Description	Remarks
	supports this function.	
	Remove meeting. Remove other device from the interaction.	

NOTE

If the interactive view prompts unstable network connection, please check and adjust the network environment.

6.2.2 Join/Initiate Interaction via Local Menu

Before you start

- Configure interactive meeting parameters (Go to **Configuration > Interaction Settings > Cloud Interactive Class** via web browser).
- Turn off video meeting.
- The device has been registered, logged in and topped up.

Step 1 Tap **Interactive Education**.


Step 2 Enter the meeting number to join an interactive meeting, or tap **Initiate Interaction** to create an interactive meeting.



NOTE

- If you are going to join an interactive meeting, the meeting number can be obtained from the initiator. Refer to *6.1.7 Configure Meeting Room Permission* for details.
- If you are going to join an interactive meeting, but the meeting does not have verification code, just leave the verification code empty, and tap **OK**.

Step 3 Operation as your desire.

 Table 6-4 Icon Description

Icon	Description
	Exit/enter full screen.
	Exit the interaction.
	Tap – or + to adjust volume.

  Icon	Description
	Display the recorded time.
 / 	Enable/disable the microphone of participant.
	Display more options.
	Interact with the participant. For example, you can tap it to ask questions to the participant, and the participant would be able to speak (the microphone of participant would be enabled automatically).
	After tapping  to interact with the participant, tap End Speaking to finish.
	Remove the participant from the meeting.
	End the interactive meeting.

Chapter 7 Course Playback and Download

7.1 Course Playback

7.1.1 Play Back Course Videos via Local Menu

Step 1 Tap **Course File**.

Step 2 Locate the course video.

Step 3 Tap the video.



Figure 7-1 Play Back Course Videos Via Local Menu

Step 4 Tap  to start playback.

Step 5 Optionally, tap the related video(s) at the right list, and play back the related videos.

7.1.2 Play Back Course Videos via Web Browser

Step 1 Go to **Playback**.

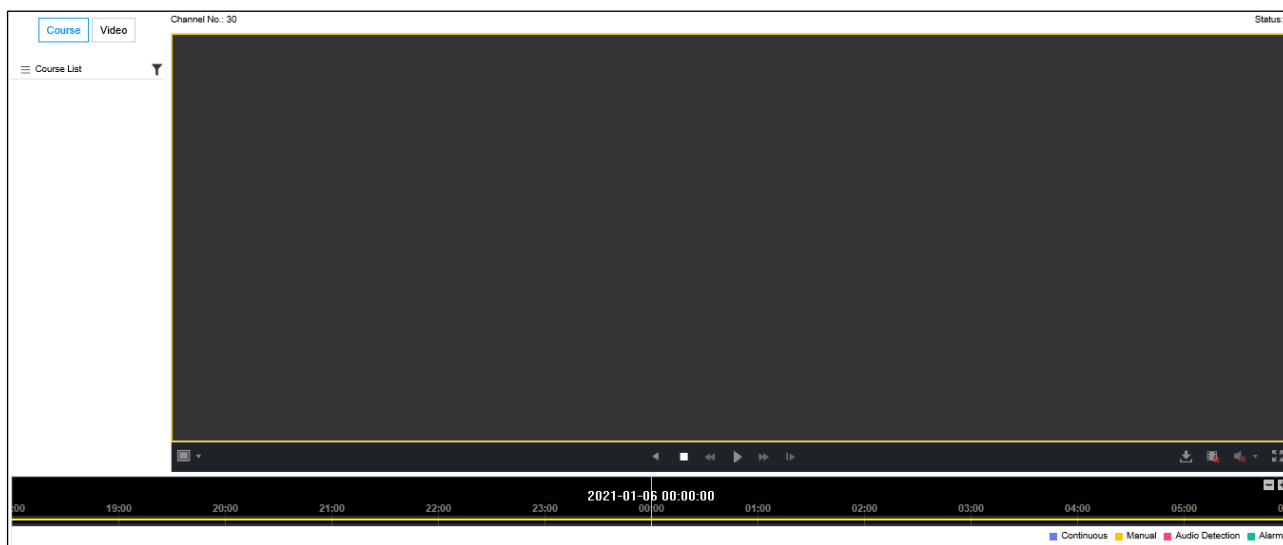


Figure 7-2 Playback

Step 2 Click **Video**.

Step 3 Select a channel in the left channel list.

Step 4 Set date and time. The day with  mark means it has videos.

Step 5 Click .

Step 6 Drag the time bar at the bottom, or click  and  to adjust time.

Step 7 Click  to start playback.

Step 8 Optionally, click **Course** to play back by searched courses.

7.2 Course Download

7.2.1 Download Courses via Local Menu

Before you start:

Prepare a USB flash drive with enough free space.

Step 1 Insert a USB flash drive to your device.



NOTE

The device USB interface is at the side panel.

Step 2 Tap **Course File**.

Step 3 Locate the course video or course video folder.

Step 4 Tap **Export** at the upper-right corner.

Step 5 Select the course videos or course video folders as your desire.

Step 6 Tap **Export** again.

Step 7 Select the backup device and folder path.

Step 8 Tap **Save**.

7.2.2 Download Courses via Web Browser

Step 1 Go to **Playback**.

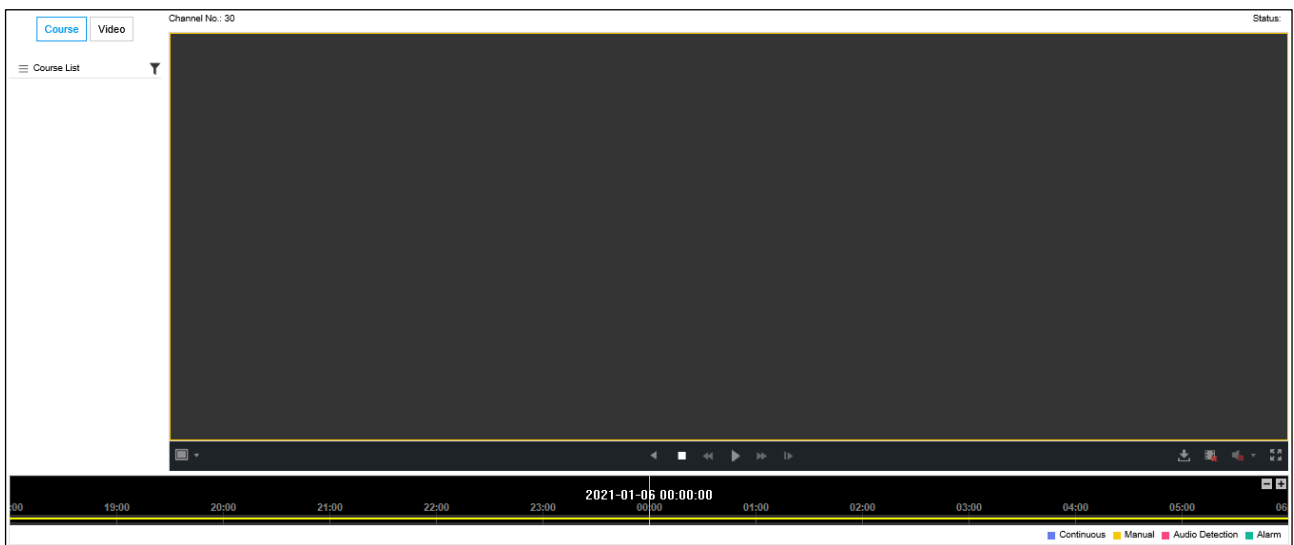


Figure 7-3 Playback

Step 2 Click .

Step 3 Set the search conditions.

Step 4 Select the course(s) from the search result for downloading.

Step 5 Click **Download** to start downloading.



NOTE

The record file will be downloaded locally. You can set the download path in **Configuration > System Settings > System Settings > Web Config**.

Chapter 8 Smart Settings

8.1.1 Enable Class Statistics Data

Purpose:

You can count view and alarm information via the feature. By default, the feature is turned off.

Step 1 Go to **Configuration > Smart Settings > Class Data** via web browser.

Step 2 Check **Enable Course Data Statistics**.

Step 3 Click **Save**.

8.1.2 Search Class Statistics Data

Step 1 Go to **Smart Data > Class Data** via web browser.

No.	Statistics Object	Start Time	End Time
Total 0 Items			

Figure 8-1 Class Data

Step 2 Select **Statistics Object**. 7 views and 10 alarms are selectable.

Step 3 Specify statistic **Start time** and **End time**.

Step 4 Click **Search** to start searching.



NOTE

After statistics finished, wait for 5 minutes to write data into hard disk before shutdown.

Chapter 9 Network Settings

9.1 PPPoE Settings

Purpose

The device can access Internet via dialing up.

Step 1 Go to **Configuration > System Settings > Network Settings > PPPoE** via web browser.



☒ Enable PPPoE

Dynamic IP

User Name

Password

Confirm

 Save

Figure 9-1 PPPoE Settings

Step 2 Check **Enable PPPoE**.

Step 3 Enter user name and password of your dial-up account.

Step 4 Click **Save**.

9.2 DDNS Settings


Purpose:

If your device is set to use PPPoE as its default network connection, you may set Dynamic DNS (DDNS) to be used for network access.

Before you start:

Prior registration with your DDNS Provider is required before configuring the system to use DDNS.

Step 1 Go to **Configuration > System Settings > Network Settings > DDNS** via web browser.

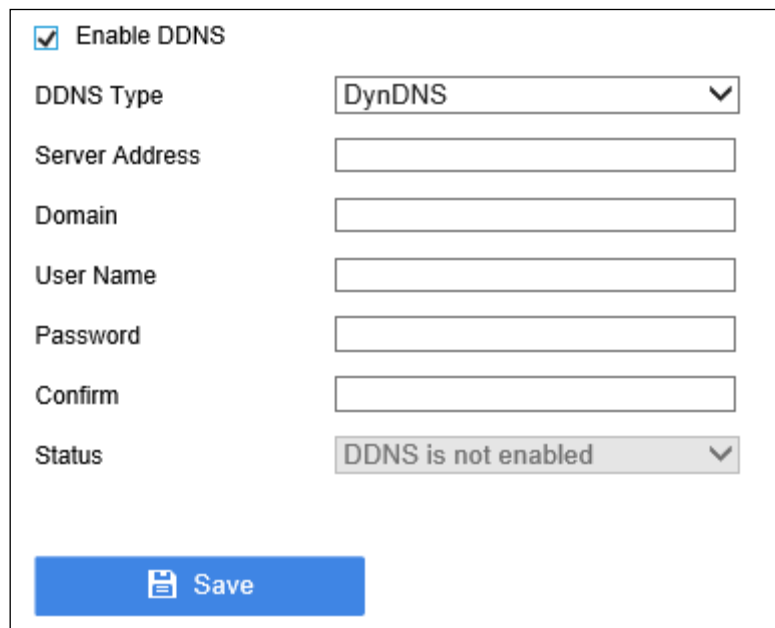

☒ Enable DDNS

DDNS Type: DynDNS

Server Address:

Domain:

User Name:

Password:

Confirm:

Status: DDNS is not enabled


 Save

Figure 9-2 DDNS Settings

Step 2 Check **Enable DDNS**.

Step 3 Select **DDNS Type** as **DynDNS**, **PeanutHull**, or **NO-IP**.

- DDNS Type: DynDNS
 - 1) Enter **Server Address** for DynDNS server.
 - 2) Enter the domain obtained from the DynDNS website in **Domain**.
 - 3) Enter user Name and password registered in the DynDNS website.
 - 4) Click **Save** to save the settings.

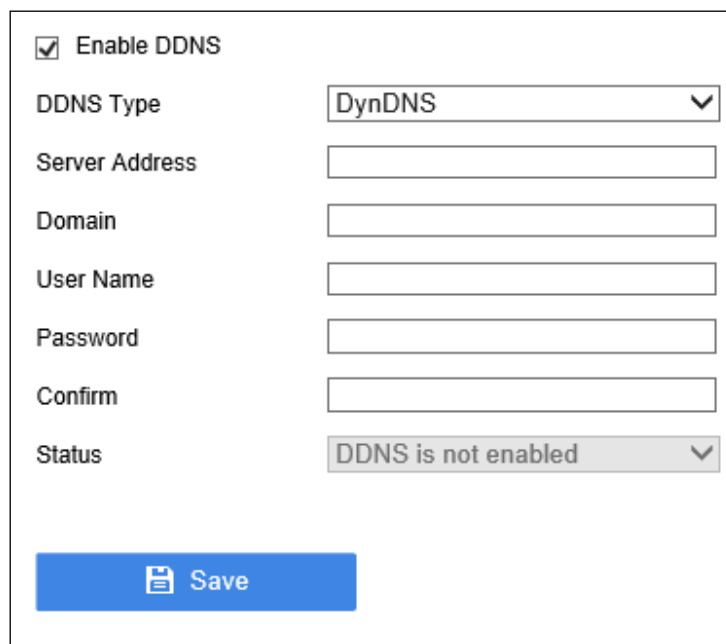

☒ Enable DDNS

DDNS Type: DynDNS

Server Address:

Domain:

User Name:

Password:

Confirm:


Status: DDNS is not enabled

 Save

Figure 9-3 DynDNS Settings

- DDNS Type: PeanutHull

- 1) Enter the user Name and password obtained from the PeanutHull website.

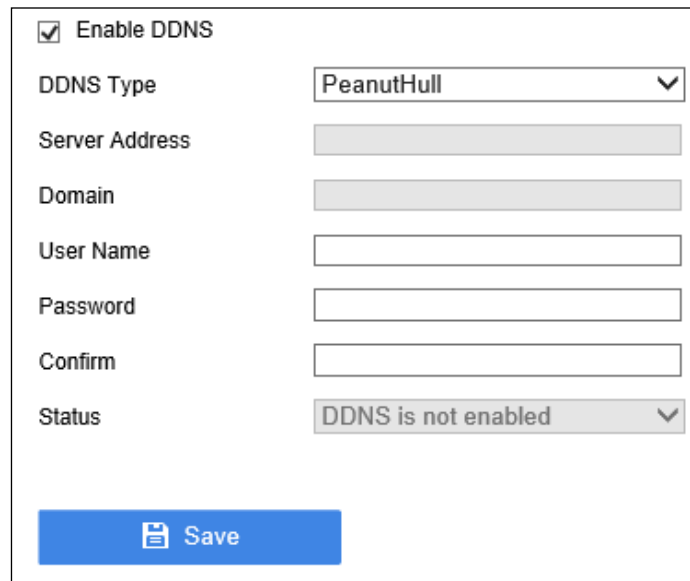


The screenshot shows a web form for configuring DDNS. At the top, there is a checkbox labeled "Enable DDNS" which is checked. Below this, the "DDNS Type" is set to "PeanutHull" in a dropdown menu. There are input fields for "Server Address", "Domain", "User Name", "Password", and "Confirm". The "Status" dropdown menu shows "DDNS is not enabled". At the bottom, there is a blue "Save" button with a floppy disk icon.

Figure 9-4 PeanutHull

- 2) Click **Save** to save the settings.

- DDNS Type: NO-IP

- 1) Enter **Server Address** for NO-IP.
- 2) Enter the domain obtained from the NO-IP website (www.no-ip.com) in **Domain**.
- 3) Enter the user name and password registered in the NO-IP website.
- 4) Click **Save** to save the settings.

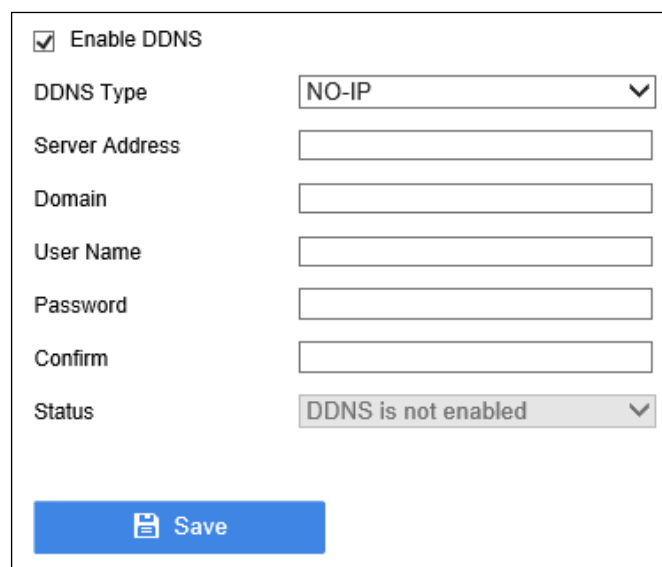

The screenshot shows a web form for configuring DDNS. At the top, there is a checkbox labeled "Enable DDNS" which is checked. Below this, the "DDNS Type" is set to "NO-IP" in a dropdown menu. There are input fields for "Server Address", "Domain", "User Name", "Password", and "Confirm". The "Status" dropdown menu shows "DDNS is not enabled". At the bottom, there is a blue "Save" button with a floppy disk icon.

Figure 9-5 NO-IP

9.3 Email Settings

Purpose:

The system can be configured to send an Email notification to all designated users if an alarm event is detected, etc., an alarm or motion event is detected or the administrator password is changed.

Before configuring the email settings, the education sharing system must be connected to a local area network (LAN) that maintains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the email accounts to which you want to send notification.

Before you start:

Configure IPv4 Address, IPv4 Subnet Mask, IPv4 Gateway, and the Preferred DNS Server in the basic network setting interface. For detailed steps, refer to *2.4 Configure Basic Network Parameters*.

Step 1 Go to **Configuration > System Settings > Network Settings > Email** via web browser.

Step 2 Configure the following Email settings:

- **Authentication (optional):** Check the checkbox to enable the server authentication feature.
- **User Name:** The user name of sender's account registered on the SMTP server.
- **Password:** The password of sender's account registered on the SMTP server.
- **Confirm:** Enter the password again.
- **SMTP Server:** The SMTP Server IP address or host name (e.g., smtp.263xmail.com).
- **SMTP Port:** The SMTP port. The default TCP/IP port used for SMTP is 25.
- **Enable SSL/TLS (optional):** Click the checkbox to enable SSL/TLS if required by the SMTP server.
- **Sender:** The name of sender.
- **Sender's Address:** The Email address of sender.
- **Select Receivers:** Select the receiver. Up to 3 receivers can be configured.
- **Receiver:** The name of user to be notified.
- **Receiver's Address:** The Email address of user to be notified.
- **Enable Attached Picture:** Check the checkbox of Enable Attached Picture if you want to send email with attached alarm images. The interval is the time of two adjacent alarm images. You can also set SMTP port and enable SSL here.
- **Interval:** The interval refers to the time between two actions of sending attached pictures.

Step 3 Click **Save**.

9.4 NAT Settings

Purpose:

Two ways are provided for port mapping to realize the remote access via the cross-segment network, UPnP™ and manual mapping.

9.4.1 UPnP™ Settings

Universal Plug and Play (UPnP™) can permit the device seamlessly discover the presence of other network devices on the network and establish functional network services for data sharing, communications, etc. You can use the UPnP™ function to enable the fast connection of the device to the WAN via a router without port mapping.

Before you start:

If you want to enable the UPnP™ function of the device, you must enable the UPnP™ function of the router to which your device is connected. When the network working mode of the device is set as multi-address, the Default Route of the device should be in the same network segment as that of the LAN IP address of the router.

Step 1 Go to **Configuration > System Settings > Network Settings > UPnP** via web browser.

☒ Enable UPnP™

Port Mapping Mode Auto

Port Type	External Port	External IP Address	Internal Port	Status
HTTP	80	0.0.0.0	80	Not Valid
RTSP	554	0.0.0.0	554	Not Valid
Server Port	8000	0.0.0.0	8000	Not Valid
HTTPS	443	0.0.0.0	443	Not Valid

Figure 9-6 UPnP™ Settings Interface

Step 2 Check **Enable UPnP™**.

Step 3 Select **Port Mapping Type** as **Manual** or **Auto**.

- **OPTION 1: Auto**

If you select **Auto**, the port mapping items are read-only, and the external ports are set by the router automatically.

- **OPTION 2: Manual**

If you select Manual as the mapping type, you can edit the external port as your demand.

**NOTE**

- You can use the default port No., or change it according to actual requirements.
- External Port indicates the port No. for port mapping in the router.
- The value of the RTSP port No. should be 554 or between 1024 and 65535, while the value of the other ports should be between 1 and 65535 and the value must be different from each other. If multiple devices are configured for the UPnP™ settings under the same router, the value of the port No. for each device should be unique.

Step 4 Click **Apply** to save the settings.

9.4.2 Manual Mapping

Purpose:

If your router does not support the UPnP™ function, perform the following steps to map the port manually in an easy way.

Before you start:

Make sure the router support the configuration of internal port and external port in the interface of Forwarding.

Step 1 Go to **Configuration > System Settings > Network Settings> UPnP** via web browser.

Step 2 Uncheck **Enable UPnP™**.

Step 3 Click on a value of **External Port**. And enter the external port No. for server port, http port, RTSP port, and https port respectively.

**NOTE**

The value of the RTSP port No. should be 554 or between 1024 and 65535, while the value of the other ports should be between 1 and 65535 and the value must be different from each other. If multiple devices are configured for the UPnP™ settings under the same router, the value of the port No. for each device should be unique.

Step 4 Click **Save** to save the settings.

Step 5 Enter the virtual server setting page of router; fill in the blank of Internal Source Port with the internal port value, the blank of External Source Port with the external port value, and other required contents.

**NOTE**

Each item should be corresponding with the device port, including server port, http port, RTSP port and https port.

Delete	External Source Port	Protocol	Internal Source IP	Internal Source Port	Application
☐	81	TCP	192.168.251.101	80	HTTP

Figure 9-7 Setting Virtual Server Item

NOTE

The above virtual server setting interface is for reference only, it may be different due to different router manufactures. Please contact the manufacture of router if you have any problems with setting virtual server.

9.5 HTTPS Settings

Purpose:

HTTPS provides authentication of the web site and associated web server that one is communicating with, which protects against Man-in-the-middle attacks. Perform the following steps to set the port number of https.

For example, if you set the port number as 443 and the IP address is 192.0.0.64, you may access the device by inputting https://192.0.0.64:443 via the web browser.

Step 1 Go to **Configuration > System Settings > Network Settings > HTTPS** via web browser.

☐ Enable

Install Certificate

Installation Method

☒ Create Self-signed Certificate

☐ Signed certificate is available, start the installation directly.

☐ Create the certificate request first and continue the installation.

Create Self-signed Certificate

Create

Save

Figure 9-8 HTTPS Interface

Step 2 Check **Enable HTTPS** to enable the function.

Step 3 Click **Save** to save the settings.

9.6 SSH Settings

Purpose:

You can enable SSH feature, thus to effectively prevent information leakage during remote management.

Step 1 Go to **Configuration > System Settings > Maintenance > Security Service** via web browser.

Step 2 Check **Enable SSH**.

Step 3 Click **Save** to save the settings.

Chapter 10 Alarm Settings

10.1 Alarm Input

Purpose:

Set the handling action of the external sensor alarm.

Step 1 Go to **Configuration > System Settings > Event Configuration > Alarm Input** via web browser.

Alarm Input No. IP Address

Alarm Type Alarm Name

☐ Enable Alarm Input Handling

Arming Schedule Linkage Method

	0	2	4	6	8	10	12	14	16	18	20	22	24
Mon	[Selected]												
Tue	[Selected]												
Wed	[Selected]												
Thu	[Selected]												
Fri	[Selected]												
Sat	[Selected]												
Sun	[Selected]												

Figure 10-1 Alarm Input Settings Interface

Step 2 Check **Enable Alarm Input Handling**.

Step 3 Select **Alarm Input No.**

Step 4 Select **Alarm Type** as **NO** (normally open) or **NC** (normally closed) for alarm type.

NOTE

- **NO**: Alarm linking method is triggered when the alarm input is closed.
- **NC**: Alarm linking method is triggered when the alarm input is opened.

Step 5 Enter **Alarm Name**.

Step 6 Configure arming schedule. Linking method is only available in the arming period.

- 1) Select a day in a week to configure arming schedule.
- 2) Set the arming schedule of the selected day.
- 3) Optionally, you can click  to copy the schedule to other days.
- 4) Optionally, you can click **Copy to** to copy the arming schedule to other alarm input No.
- 5) Click **Save** to save the settings.

Step 7 Configure linking method.

- 1) Set **Normal Linking** action, **Trigger Alarm Output**, **Trigger Recording**, and **PTZ Linking** as your desire. Once an alarm occurs during arming period, the selected linking method will be triggered.
- 2) Click **Save** to save the settings.

10.2 Alarm Output

Purpose:

You can configure the delay duration, arming period, and alarm output name.

Step 1 Go to **Configuration > System Settings > Event Configuration > Alarm Output** via web browser.

Alarm Output No. IP Address

Default Status Triggering Status

Delay Alarm Name

Arming Schedule

	0	2	4	6	8	10	12	14	16	18	20	22	24
Mon	[Solid Blue Bar]												
Tue	[Solid Blue Bar]												
Wed	[Solid Blue Bar]												
Thu	[Solid Blue Bar]												
Fri	[Solid Blue Bar]												
Sat	[Solid Blue Bar]												
Sun	[Solid Blue Bar]												

Figure 10-2 Alarm Output Settings Interface

Step 2 Select **Alarm Output No.** to configure in the dropdown list.

Step 3 Select the **Delay** duration. The device sends out alarm output signal for the set duration.

Step 4 Enter **Alarm Name**.

Step 5 Configure the arming time. The alarm output signal is only available in arming duration.

- 1) Select a day in a week to configure arming schedule.
- 2) Set the arming schedule of the selected day.
- 3) Optionally, you can click  to copy the schedule to other days.
- 4) Optionally, you can click **Copy to** to copy the arming schedule to other alarm output No.

Step 6 Click **Save** to save the settings.

10.3 Exception

Purpose:

You can specify the triggered linkage action and alarm output when exception occurs.

Step 1 Go to **Configuration > System Settings > Event Configuration > Exception** via web browser.

The screenshot shows a web-based configuration interface for an 'Exception Type'. At the top, a dropdown menu is set to 'HDD Full'. Below this, there are two columns of settings, each with a header and several options, all of which are currently unchecked. The left column is titled 'Normal Linkage' and includes 'Audible Warning', 'Send Email', and 'Notify Surveillance Center'. The right column is titled 'Trigger Alarm Output' and includes 'A->1', 'D1->1', 'D1->2', and 'D3->1'. At the bottom of the form is a blue 'Save' button with a floppy disk icon.

Exception Type: HDD Full	
☐ Normal Linkage	☐ Trigger Alarm Output
☐ Audible Warning	☐ A->1
☐ Send Email	☐ D1->1
☐ Notify Surveillance Center	☐ D1->2
	☐ D3->1

Save

Figure 10-3 Exception

Step 2 Select **Exception Type**.

- **HDD Full:** The HDD is full.
- **HDD Error:** Writing HDD error or unformatted HDD.
- **Network Disconnected:** Disconnected network cable.
- **IP Address Conflicted:** Duplicated IP address.
- **Illegal Login:** Incorrect user ID or password.
- **Record Exception:** Recording abnormal.
- **Resolution Mismatch:** Video files' resolution stored in education sharing system mismatches with the connected camera resolution.

Step 3 Select **Normal Linking** and **Trigger Alarm Output**.

Step 4 Click **Save** to save the settings.

Chapter 11 User Management

Purpose:

You can add, edit, and delete users.

Step 1 Go to **Configuration > System Settings > User Management > User Management** via web browser.

User List			Add	Modify	Delete
No.	User Name	Level			
1	admin	Administrator			
2	test	Operator			

Figure 11-1 User Management

11.1 Add a User

Step 1 Click **Add**.

Add user

User Name

test1

Level

Operator

Admin Password

.....

Password

.....

Strong

Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.

Confirm

.....

OK

Cancel

Figure 11-2 Add User

Step 2 Enter user name and password.

**WARNING**

Strong Password recommended—We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories:

upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 3 Select **Level** as **Operator** or **User**.

- **Operator:** The *Operator* user can view live image, and achieve playback operation which includes course search and course download.
- **User:** The Guest user only has permission of viewing live image.

Step 4 Click **OK** to add the user.

11.2 Modify a User

Step 1 Select a user account.

Step 2 Click **Modify**.

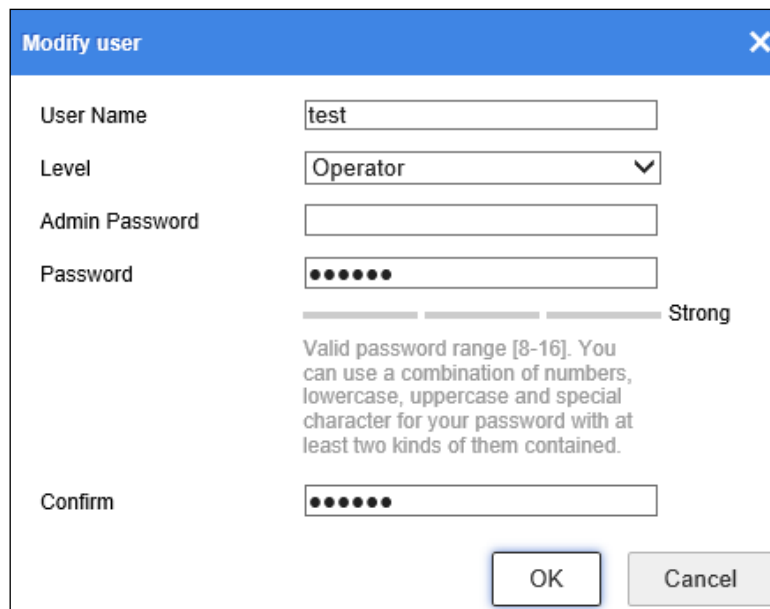


Figure 11-3 Modify a User

Step 3 Edit the user account, including password and level.



WARNING

STRONG PASSWORD RECOMMENDED—We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 4 Click **OK**.

11.3 Delete a User

Step 1 Select a user account.

Step 2 Click **Delete**, and a message box will pop up.

Step 3 Click **OK** to delete the selected user account.

Chapter 12 Maintenance

Purpose:

You can restart, restore default, repair database index, export/import configuration file, and upgrade device in **Configuration > System Settings > Maintenance > Upgrade & Maintenance** via web browser.

Reboot	
Reboot	Reboot the device.
Default	
Restore	Reset all the parameters, except the IP parameters and user information, to the default settings.
Default	Restore all parameters to default settings.
Export	
Device Parameters	
IP Camera Parameters	
Import Config. File	
Device Parameters	Browse Import
Status	
IP Camera Parameters	Browse Import
Status	
Upgrade	
Firmware v	Browse Upgrade
Status	
Note: The upgrading process will be 1 to 10 minutes, please don't disconnect power to the device during the process. The device reboots automatically after upgrading.	

Figure 12-1 Maintenance

12.1 Reboot the Device

Step 1 Click **Reboot** to restart the device.

12.2 Default Settings

Step 1 Select the restoring type as **Restore** or **Default**.

- **Restore:** Restore all parameters, except the network (including IP address, subnet mask, gateway, MTU, NIC working mode, default route, server port, etc.) and user account parameters, to the factory default settings.
- **Default:** Restore all parameters to the factory default settings.

12.3 Export/Import Configuration File

- Import configuration file.
 - 1) Click **Browse**.
 - 2) Select configuration file path.
 - 3) Click **Import** to import the selected file.
- Export configuration file.
 - 1) Click **Export**.
 - 2) Select exporting path.
 - 3) Click **Save** to save the configuration file.

12.4 Import/Export IP Camera Configuration File

Purpose:

You can export the education sharing system's IP camera adding configuration file to the computer. And import the IP camera adding configuration file into the education sharing system.

- Import IP camera configuration file.
 - 1) Click **Browse**.
 - 2) Select IP camera configuration file path.
 - 3) Click **Import** to import the selected file.
- Export IP camera configuration file.
 - 1) Click **Export**.
 - 2) Select exporting path.
 - 3) Click **Save** to save the configuration file.

12.5 Remote Upgrade

Step 1 Click **Browse**.

Step 2 Select upgrade file.

Step 3 Click **Upgrade** to upgrade.

Chapter 13 Other Settings

13.1 Sound Settings

You can configure the sound volume in **System Settings > Sound** via local menu. For sound mix settings, refer to 5.2.7 *Sound Mix Settings* for details.

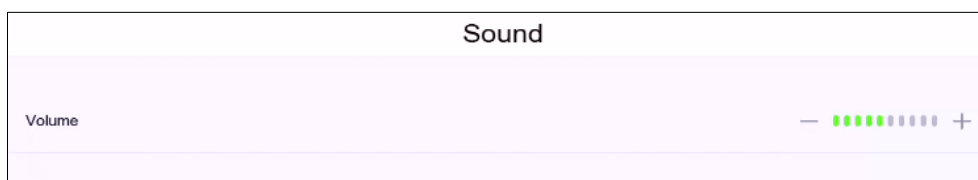


Figure 13-1 Configure Sound Volume

13.2 Video Settings

Purpose:

By configuring the video parameters you can define the parameters which affect the image quality, such as the resolution, video quality, and so on.

Before you start:

Ensure the hard disk has already been installed.

Step 1 Go to **Configuration > Audio/Video > Video Settings > Video**.

Channel No.	[A1] Teacher	▼
Front-end Resolution	NO VIDEO	
Stream Type	Main Stream(Normal)	▼
Video Type	Video&Audio	▼
Resolution	1920*1080P	▼
Bitrate Type	Variable	▼
Video Quality	Medium	▼
Frame Rate	Full Frame Rate	▼ fps
Max. Bitrate	2048	Kbps
Video Encoding	H.264	▼
📄 Copy to... 💾 Save		

Figure 13-2 Video Settings

Step 2 Select **Channel No.** to configure.

Step 3 Select **Stream Type** as **Main Stream (Normal)**, **Third Stream**, **Sub-Stream**. Main stream is for recording and sub-stream is for network transmission.

Step 4 Configure the video parameters as your desire, including **Resolution**, **Bitrate Type**, **Video Quality**, **Frame Rate**, **Max. Bitrate**. The video encoding format and audio encoding format will be shown in **Encoding Format** and **Audio Format**.

Step 5 Click **Save** to save the settings.

13.3 Display Settings

13.3.1 Configure Auto Screen Off Time

Your device will automatically turn off the local menu screen after a specified period. When the screen is off, you can press the power button at the side panel to light it up. The time period is configurable in **System Settings > Display** via local menu.

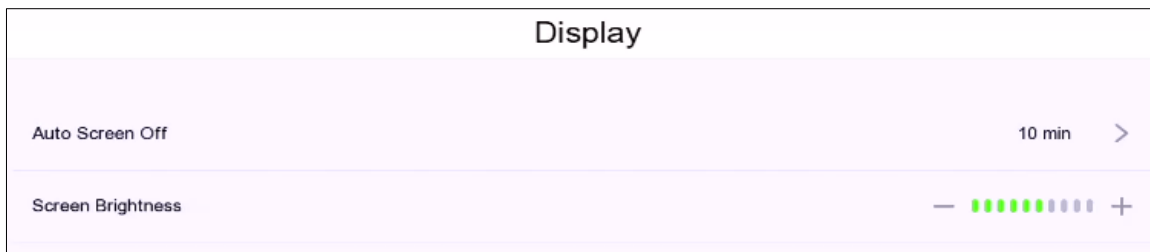


Figure 13-3 Configure Auto Lock Screen Time

13.3.2 Configure LCD Screen Brightness

The local menu LCD screen brightness is configurable in **System Settings > Display** via local menu. You can tap – or + to adjust the brightness.




Figure 13-4 Configure LCD Screen Brightness

13.3.3 Menu Output

Purpose:

You can set the local menu output interface and HDMI/VGA output resolution.

Step 1 Go to **Configuration > System Settings > System Settings > Menu Output** via web browser.

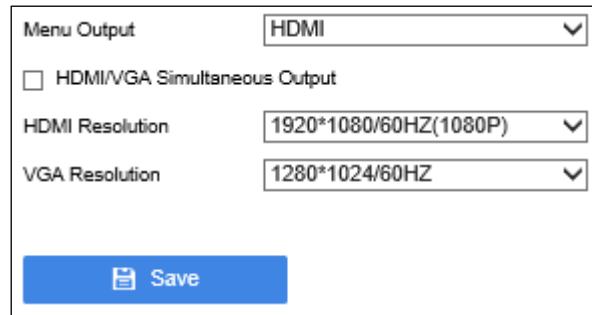

Menu Output: HDMI

☐ HDMI/VGA Simultaneous Output

HDMI Resolution: 1920*1080/60HZ(1080P)

VGA Resolution: 1280*1024/60HZ

Save

Figure 13-5 Menu Output

Step 2 Edit **Menu Output**, **VGA Resolution**, **HDMI Resolution** and **HDMI/VGA Simultaneous Output**.

- **HDMI/VGA Simultaneous Output:** It means that the screens connected by different interfaces (e.g. HDMI, VGA) share the same output source, so their images are the same, so do the mouse operation and menu content.

Step 3 Click **Save** to save the settings.

13.3.4 HDMI/VGA Output Image Parameter Settings

Purpose:

You can adjust display effect of courseware image and HDMI/VGA output image.

Step 1 Go to **Configuration > System Settings > System Settings > Output Image Parameter Adjustment** via web browser.

Step 2 Select **Configuration Port**.

Step 3 Set image parameters, including brightness, contrast, saturation, hue, and sharpness.

13.3.5 Configure OSD

Purpose:

You can configure parameters of OSD (On Screen Display) menu.

Step 1 Go to **Configuration > Audio/Video > Video Settings > OSD and Subtitle** via web browser.

Figure 13-6 Display Settings

Step 2 Select **Channel No.**

Step 3 Configure parameters as your desire.

Step 4 Optionally, you can overlay text on the selected channel.

- 1) Check the number of **Text OverLay**.
- 2) **Enter text content.**
- 3) You can drag the OSD on screen to move its position.
- 4) Set the **Display Mode** and **OSD Size** as your desire.

Step 5 Click **Save** to save the settings.

13.4 Time Settings

13.4.1 Configure Time via Local Menu

Purpose:

You can manually sync the device time, or let the device automatically sync time with NTP (Network Time Protocol) server.

Step 1 Go to **System Settings > System > Time** via local menu.

Time	
Time Zone	(GMT+00:00) Dublin, Edinburgh, London >
Time Sync Method	Manual Time Sync >
Set Date	2012-01-01 
Set Time	11:28:22 

Figure 13-7 Time Settings via Local Menu

Step 2 Select **Time Zone**.

Step 3 Select **Time Sync Method**.

- **Manual Time Sync:** Manually adjust the device time.
- **NTP Time Sync:** Automatically adjust the device time with the connected NTP server.

Step 4 Set the related parameters.

13.4.2 Configure Time via Web Browser

Purpose:

You can manually sync the device time, or let the device automatically sync time with NTP (Network Time Protocol) server.

Step 1 Go to **Configuration > System Settings > System Settings > Time Settings** via web browser.

Time Zone: (GMT+08:00) Beijing, Urumqi, Singapore

NTP

☐ NTP

Server Address:

NTP Port: 123

Interval: 60 minute(s)

Manual Time Sync.

☒ Manual Time Sync.

Device Time: 2018-09-20T18:43:58

Set Time: 2018-09-20T18:42:39 ☐ Sync. with computer time

DST

☐ Enable DST

Start Time: Jan First Sun 00

End Time: Jan First Sun 00

DST Bias: 30minute(s)

Save

Figure 13-8 Time Settings via Web Browser

Step 2 Select **Time Zone**.

Step 3 Select the clock synchronization mode as **NTP** or **Manual Time Synchronization**.

- **NTP**: Enter NTP server, port and interval time.
- **Manual Time Sync**: Set the time in **Set Time**. Or you can check **Synchronize with computer time**.

Step 4 Click **Save**.

13.5 DST Settings


Purpose:

DST (daylight saving time) refers to the period of the year when clocks are moved one period ahead. In some areas worldwide, this has the effect of creating more sunlit hours in the evening

during months when the weather is the warmest.

We advance our clocks ahead a certain period (depends on the DST bias you set) at the beginning of DST, and move them back the same period when we return to standard time (ST).

Step 1 Go to **Configuration > System Settings > System Settings > Time Settings** via web browser.

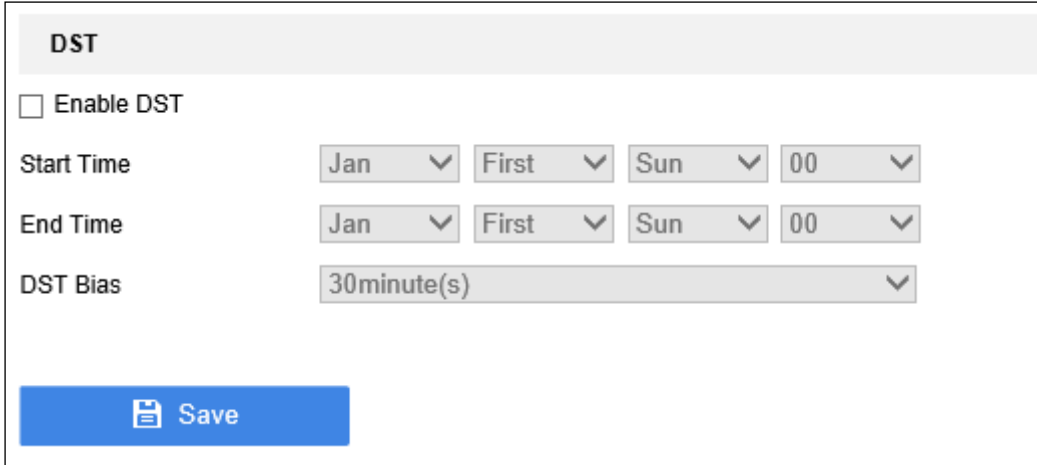

DST

☐ Enable DST

Start Time Jan ▼ First ▼ Sun ▼ 00 ▼

End Time Jan ▼ First ▼ Sun ▼ 00 ▼

DST Bias 30minute(s) ▼

 Save

Figure 13-9 DST Settings

Step 2 Check **Enable DST**.

Step 3 Set **Start Time** and **End Time** of the DST period.

Step 4 Select **DST Bias**.

Step 5 Click **Save** to save the settings.

13.6 Configure Auto Logout Time

Your device can automatically log out after it is on standby for a specified time. After the device is logged out, you have to enter your password again to log in. The auto logout time is configurable in **System Settings > System > Auto Logout** via local menu.

13.7 Configure Password Protection

After password protection is enabled, the device will verify your password when operating certain functions like live view, cloud interaction, courseware settings, etc. Password protection function is configurable in **System Settings > System > Password Protection** via local menu.

13.8 View Device Info

Device information like software version, storage status, PoE status, network status, connected channel information, and logs can be viewed in **System Settings > System > Info** via local menu.

You can search and export logs as your desire.

Chapter 14 Appendix

14.1 SADP Software Introduction

- Description of SADP

SADP (Search Active Devices Protocol) is a kind of user-friendly and installation-free online device search tool. It searches the active online devices within your subnet and displays the information of the devices. You can also modify the basic network information of the devices using this software.

- Search active devices online

- Search online devices automatically

After launch the SADP software, it automatically searches the online devices every 15 seconds from the subnet where your computer locates. It displays the total number and information of the searched devices in the Online Devices interface. Device information including the device type, IP address and port number, etc. will be displayed.

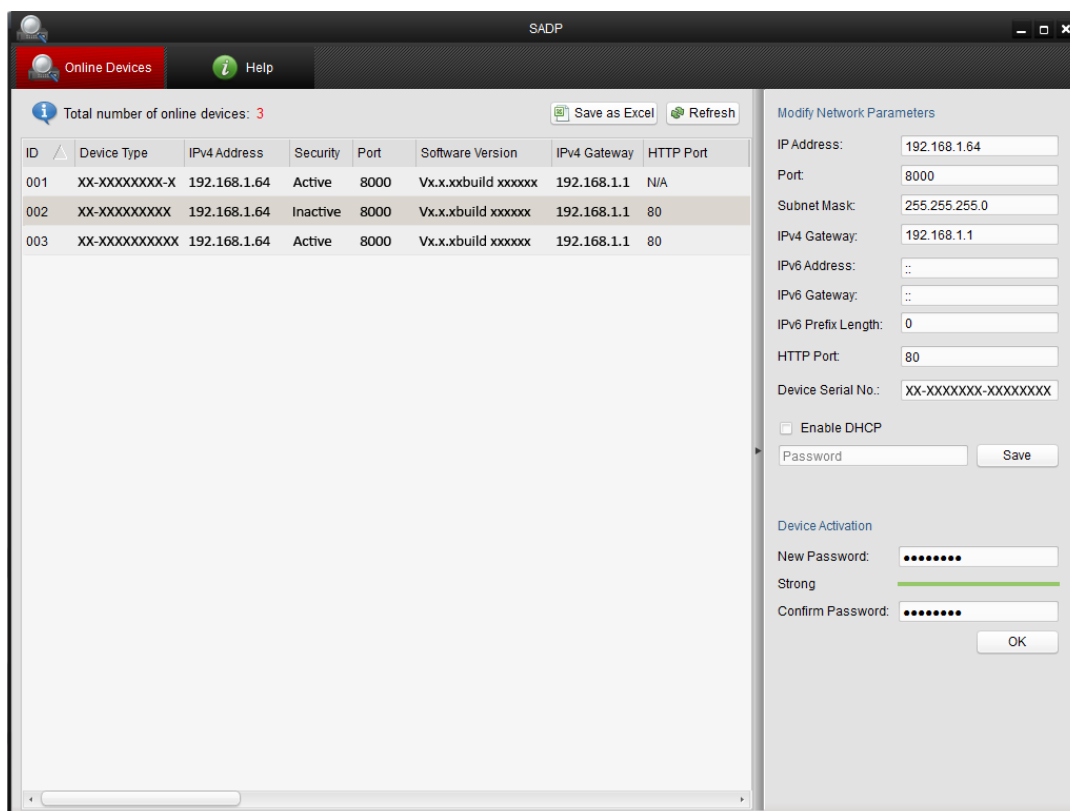
 


Figure 14-1 Searching Online Devices

 NOTE

Device can be searched and displayed in the list in 15 seconds after it went online; it will be removed from the list in 45 seconds after it went offline.

- Search online devices manually

You can also click  to refresh the online device list manually. The newly searched devices will be added to the list.

 
 NOTE

You can click  or  on each column heading to order the information; you can click  to expand the device table and hide the network parameter panel on the right side, or click  to show the network parameter panel.

- Modify network parameters

Step 1 Select the device to be modified in the device list and the network parameters of the device will be displayed in the **Modify Network Parameters** panel on the right side.

Step 2 Edit the modifiable network parameters, e.g. IP address and port number.

Step 3 Enter the password of the admin account of the device in the **Password** field and click  to save the changes.

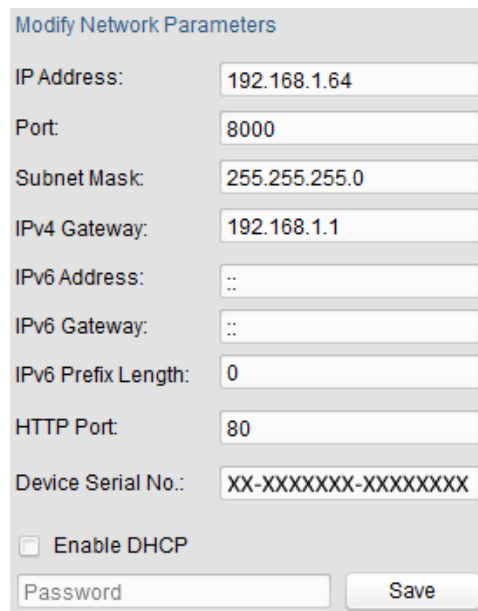


Figure 14-2 Modify Network Parameters

14.2 Glossary

Dual-Stream

Dual-stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the DVR, with the main stream having a maximum resolution of 1080P and the sub-stream having a maximum resolution of CIF.

DVR

Acronym for Digital Video Recorder. A DVR is device that is able to accept video signals from analog cameras, compress the signal and store it on its hard drives.

HDD

Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.

DHCP

Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.

HTTP

Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network.

PPPoE

PPPoE, Point-to-Point Protocol over Ethernet, is a network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. It is used mainly with ADSL services where individual users connect to the ADSL transceiver (modem) over Ethernet and in plain Metro Ethernet networks.

DDNS

Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.

Hybrid DVR

A hybrid DVR is a combination of a DVR and NVR.

NTP

Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.

NTSC

Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.

NVR

Acronym for Network Video Recorder. An NVR can be a PC-based or embedded system used for

centralized management and storage for IP cameras, IP Domes and other DVRs.

PAL

Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.

PTZ

Acronym for Pan, Tilt, Zoom. PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.

USB

Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

14.3 Communication Matrix

Please scan the QR code below to view the communication matrix document.



Figure 14-3 Communication Matrix

14.4 Device Command

Please scan the QR code below to view the device command document.



Figure 14-4 Device Command



See Far, Go Further