



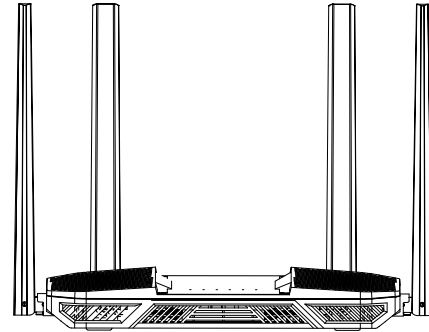

Wireless Router


Quick Start Guide

Packing List

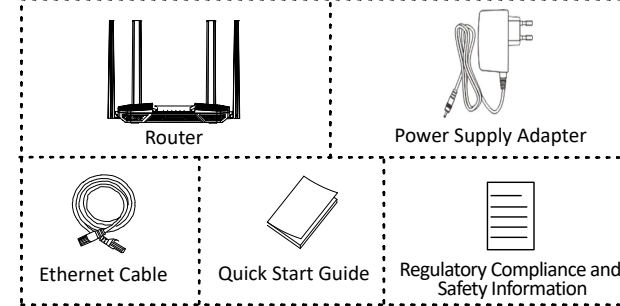

Place the Router

- The closer, the faster.
- Higher and no coverage.
- Place it on the centre to cover more space.

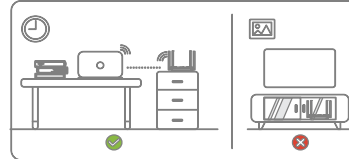

More Information

Get more information by scanning the QR code below or going to <https://enpinfodata.hikvision.com/analysisQR/showQR/7b41440e>




1

Learn About Router

Check User Manual for more indicator rules.

Power	Solid Blue: Power is on.
WAN	• Solid Red: The Internet is not accessible. • Solid Blue: The Internet is accessible.
LAN	Solid Blue: At least one LAN port is connected.
2.4 GHz	Solid Blue: The 2.4 GHz wireless band is enabled.
5 GHz	Solid Blue: The 5 GHz wireless band is enabled.
WPS/MESH	Solid Blue (for 5mins): WPS connection or MESH networking is finished.

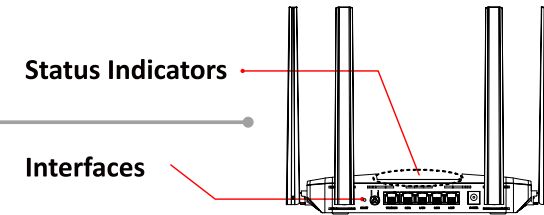



RESET	Long press for 8s to restore to defaults.
	Long press for 0-3s: • Password-free accessed by wireless devices; • Mesh networking with Hikvision routers.
WAN/LAN	Connect to an uplink device (e.g. modem).
LAN	Connect to downlink devices (e.g. IPCs, PCs).
POWER	Connect to the power supply adapter.

2

Connect Power Supply and Internet


Refer to the figures below to complete wiring.

Connect to the Internet

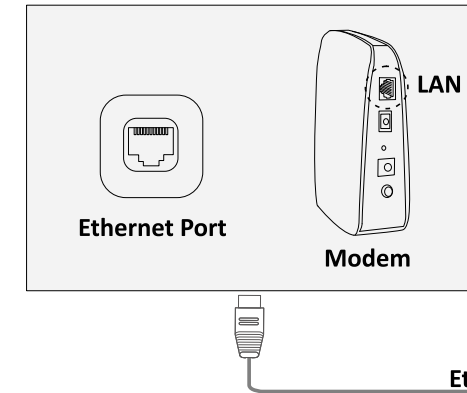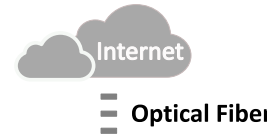

Ethernet Cable

Connect to Power Supply

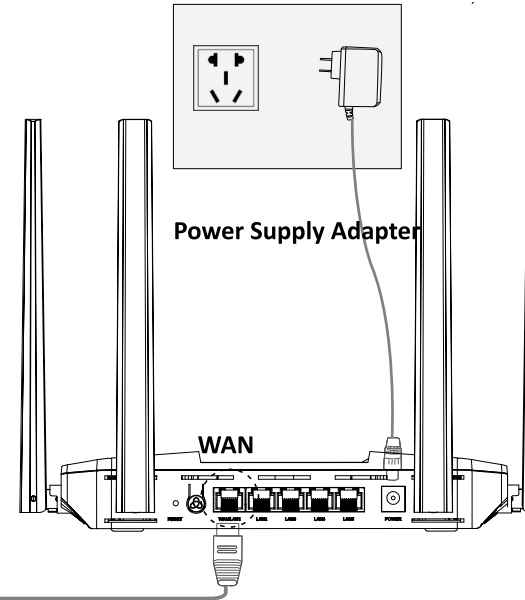

3


Activate Router

Follow these steps to complete the initial activation of the router.

Check the Label


Obtain Wi-Fi name and IP address.

Wi-Fi Name(SSID): HIKVISION_XXXX
IP Address: 192.168.9.1
Login Address: <http://hikrouter.net>

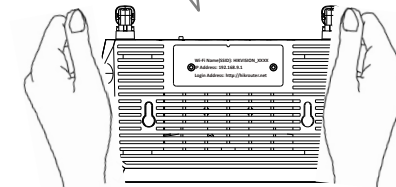

Connect to a Wi-Fi Network


Connect your device to the Wi-Fi.

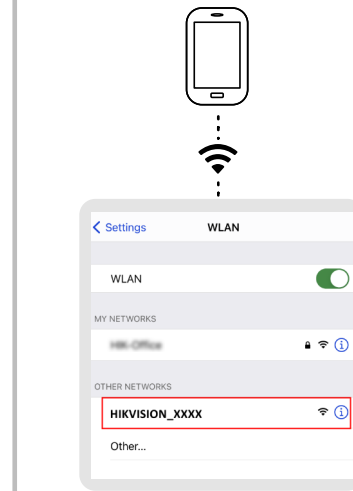

Enter Activation Page

Automatically redirect to the page.

Select your Country/Region

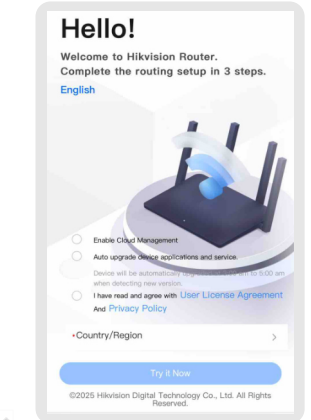

If not, you can manually enter IP address (**192.168.9.1**) or login address (**<http://hikrouter.net>**) in the browser.

