



HIKVISION

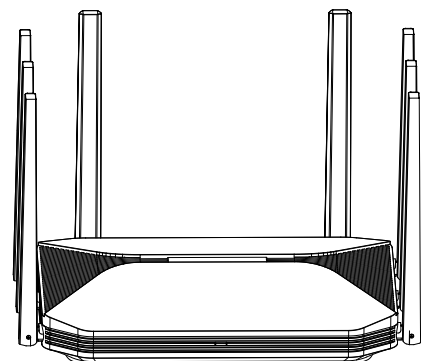

Wireless Router


Quick Start Guide

Packing List

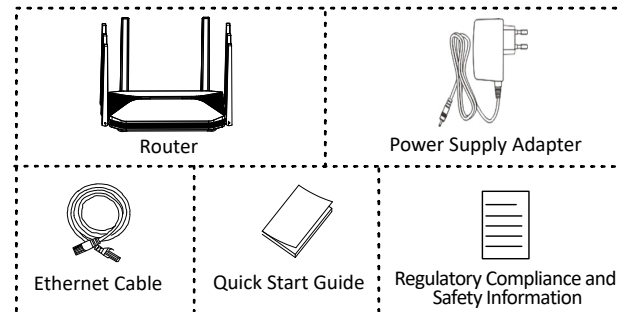

Place the Router

- The closer, the faster.
- Higher and no coverage.
- Place it on the centre to cover more space.

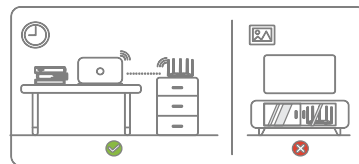

More Information


Get more information about configuring the device by scanning the QR code beside or going to <https://enpinfodata.hikvision.com/analysisQR/showQR/6854dd2c>



1

Learn About Router

Descriptions about indicators and interfaces.

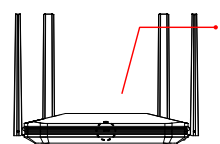


- Solid Blue:
The Internet is accessible.
- Flash Blue:
Device pairing or restoring to defaults...
- Solid Red:
Unactivated or the Internet is inaccessible;
Or upgrading...
- Flash Red:
Device pairing or broadband migrating...



Self-Adaptive WAN/LAN

Connect to an uplink device (e.g. modem) or downlink devices (e.g. IPCs, PCs).

- Long press for 1-3s:
Password-free accessed by wireless devices;
Mesh networking with Hikvision routers.

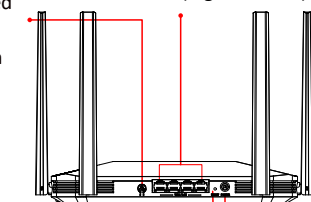

RESET

- Long press for 8s:
Restore to defaults.

POWER

Connect to the power supply adapter.

2


Connect Power Supply and Internet

Refer to the figures below to complete wiring.

Connect to the Internet



Optical Fiber

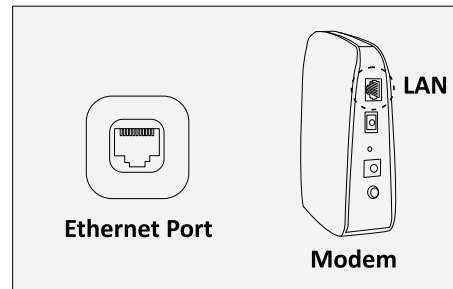


Ethernet Port

Modem

Ethernet Cable



Connect to Power Supply

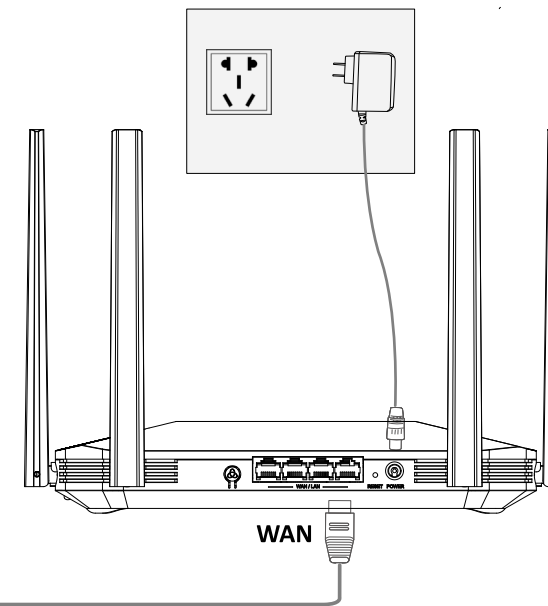

WAN

3


Activate Router

Follow these steps to complete the initial activation of the router.

Check the Label


Obtain Wi-Fi name and IP address.

Wi-Fi Name(SSID): HIKVISION_XXXX
IP Address: 192.168.9.1
Login Address: <http://hikrouter.net>

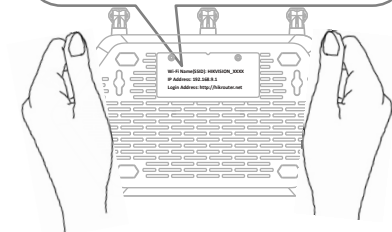

Connect to a Wi-Fi Network


Connect your device to the Wi-Fi.

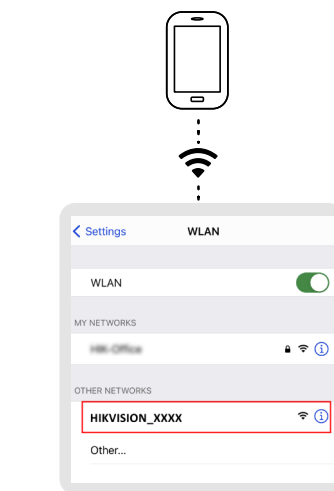

Enter Activation Page

Automatically redirect to the page.

Select your Country/Region

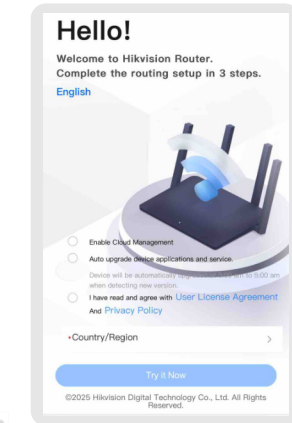

If not, you can manually enter IP address (192.168.9.1) or login address (<http://hikrouter.net>) in the browser.

