



Quadripartite Blind Area Monitoring System

Quick Start Guide

Legal Information

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Preface

The purpose of this section is to make sure the user can use the product correctly in this manual to avoid risky operation or property damage. Before using this product, please read the product manual carefully and keep it for future reference.

Overview

This manual is applicable to the quadripartite monitoring system. It is used to guide you in the basic installation and operation of the quadripartite monitoring system.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Note	Description type text, which indicates the supplement and interpretation of body text.
 Caution	Please pay attention to text type, which means to remind the user of important operations, or to prevent potential injury and property damage.
 Warning	Warning type text indicates potential risk. If not avoided, it may cause injury, damage to device, or service interruption.
 Danger	Hazardous text indicates high potential risk. If not avoided, it may lead to serious risk of loss of human life.

Safety Instructions

Warning

- During device installation and use, the electrical safety regulations of the country and area of use should be strictly observed.
- To avoid heat build-up, please keep the device ventilation smooth.
- If the device is smoked, the device will get bad taste, or sound loudspeaker. Turn off the power supply and unplug the power cable. Please contact the distributor or service center.
- If the device is not working normally, please contact the store or nearest service center that purchased the device. Do not disassemble or edit the device in any way. (The Company shall not be liable for any problems caused by unauthorized modification or repair.)



Caution

- During installation and use, the electrical safety regulations of the country and area must be strictly observed.
- Before installing the device, please go into details of power connection mode.
- The system should be installed in a vehicle manufacturer or manufacturer. Please install the device in the vehicle as much as possible.
- Well ventilated location.
- Do not drop the object on the device or vibrate the device.
- Do not use the device in high-temperature, low-temperature, or high-humidity environments. See Device for temperature and humidity requirements.
- The device should be stored in a dry, non-corrosive gas environment, and avoid direct sunlight.
- Keep the device away from the location where magnetic field interference exists.
- Wireless network antennas and satellite positioning antennas should be installed near the roof or window and be lightning-proof.
- Do not cover or cover any object.
- The device is a sophisticated electronic device. No user can repair the component. Do not disassemble it.
- The device may face network security problems. Please strengthen the protection of personal information and data security. When You Send
- Please contact us in time if network security risk exists in current device.
- Please keep all the original packaging materials of the device properly. If the problem persists, use the packaging materials to package the device.
- Go to agent or return to manufacturer for handling. The company does not assume responsibility for the accidental damage caused by the transportation of non-original packaging material.



Note

- The quality requirements of installation and maintenance personnel should be qualified with the certificate or experience of video surveillance system installation, maintenance, and related work (such as high-altitude operation). The following knowledge and operation skills are also required.
- Basic knowledge and installation skills of video surveillance system and component.
- Basic knowledge and operation skills of low-voltage wiring and low-voltage electronic wiring.
- It has basic network security knowledge and skills, and is able to read the content of this manual.

 
 
 
 
 
TABLE OF CONTENTS

- Chapter 1 Unpack Check..... 5**
- Chapter 2 Appearance Introduction 6**
- Chapter 3 Introduction to Cable 7**
 - 3.1 Cable Appearance 7
 - 3.2 Cable Interface Definition..... 8
- Chapter 4 Installation Description 9**
 - 4.1 Mounting Bracket 9
 - 4.2 Fixed Screen 11
 - 4.3 Wiring Installation..... 12
 - 4.4 Camera Installation Guidance..... 12
 - 4.4.1 Confirm installation height and installation location..... 12
 - 4.4.2 BSD Installation 15

Chapter 1 Unpack Check

When you purchase the device, please check if the product package and appearance are damaged. Please open the package and check if the product is equipped with complete accessories. The device can be installed.

Table 1-1 Packing List

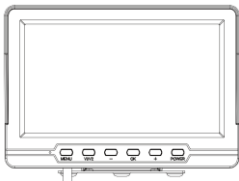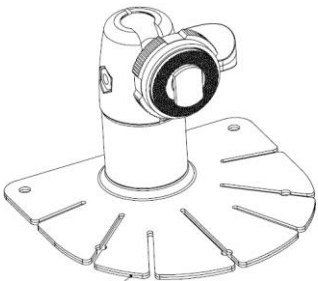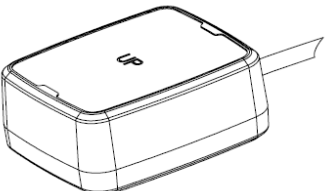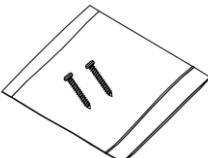No.	Picture	Name	Quantity	Unit
1		Quadripartite Monitoring Screen	1	Dock
		Bracket	1	Dock
6		Quick Start Guide	1	Original
		Gmouse	1	Dock
8		Screw Package	1	Package

Chapter 2 Appearance

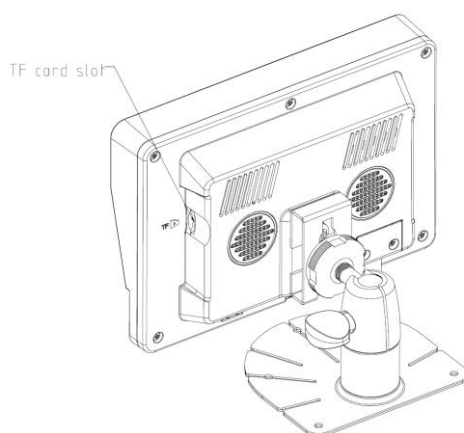 


Figure 2-1

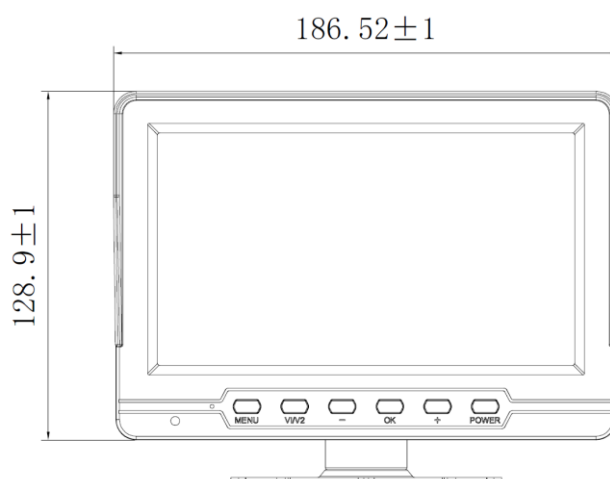 


Figure 2-2

Table 2-1

Key Name	Function
MENU	Enter Main Menu
	Back to upper-level interface.
V1/V2	Live View/Record Camera Channel Switch
	PgUp/ PgDn Switch
“-”	Move the cursor to the left and the cursor down (edit status).
	Switch Camera Lens in 1/2 Screen
“+”	Move the cursor to the right and the cursor up (edit status).
	Switch Camera Lens in 1/2 Screen
OK	Confirm
POWER	Display Screen

Chapter 3 Wiring

3.1 Cable Appearance

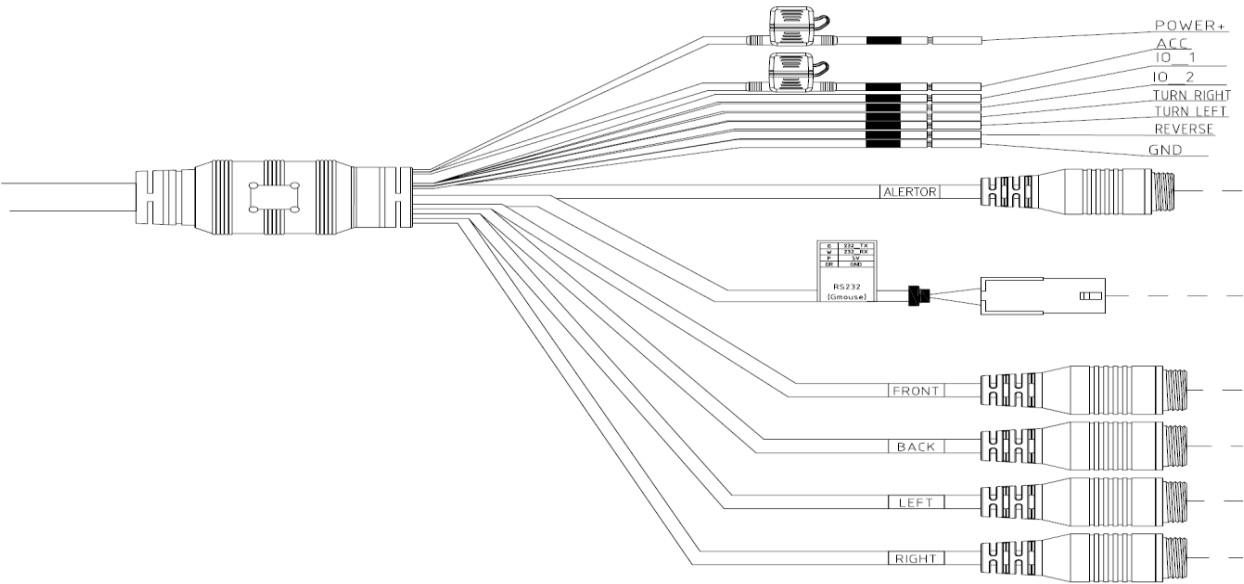 
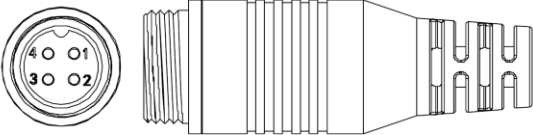 
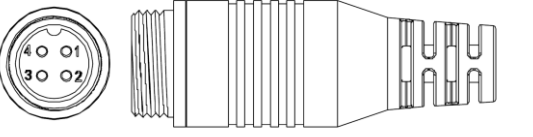 
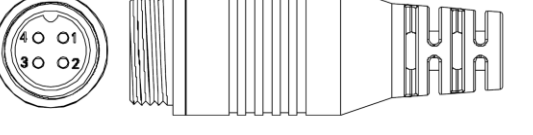 
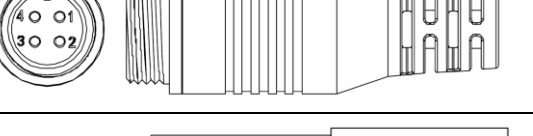 
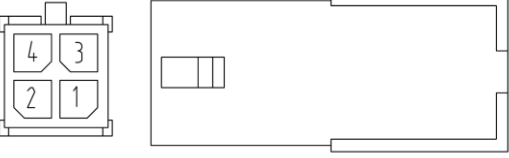 
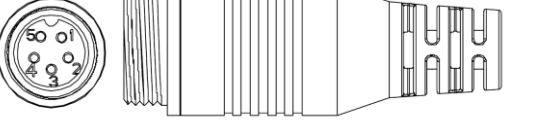 
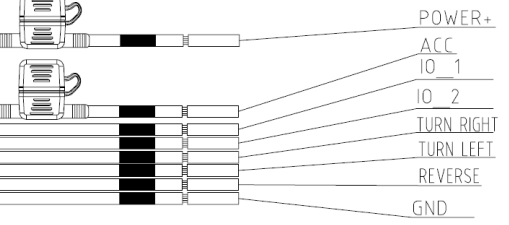 


Figure 3-1 Cable Appearance

3.2 Cable Interface Definition

Table 3-1 Interface Description

Interface	Interface Definition	Interface Picture	Rated Load
12M4B(Right)	1. VIDEO_4 2. VIDEO_IO4 3. POWER 4. GND		12V 2W max
12M4B (Left)	1. VIDEO_3 2. VIDEO_IO3 3. POWER 4. GND		12V 2W max
12M4B (Back)	1. VIDEO_2 2. VIDEO_IO2 3. POWER 4. GND		12V 2W max
12M4B (Front)	1. VIDEO_1 2. VIDEO_IO1 3. POWER 4. GND		12V 2W max
43020-0401 (RS232)	1. RS232_RX 2. GND 3. RS232_TX 4.5V_DEV		5V 0.2W max
12M5B (Alertor)	1. / 2. RS485-_1 3. RS485+_1 4. GND 5. ACC		12V 3W max
Hard Wire	1. POWER+ 2. ACC 3. IO_1/I/O/2 4. TURN RIGHT 5. TURN LEFT 6. REVERSE 7. GND		/

Chapter 4 Installation

Note

The screws of this four-way surveillance system should be secured. All the mounting screws are standard. Before the screen is assembled with the stand, the hole location should be selected according to Figure 4-2 in the proper position of the central control station.

4.1 Mounting Bracket

Select suitable position to fix the device station (you can select whether to fix the device or the screw).

Note

When setting the adhesive back, it is recommended to use it in a smooth and smooth environment.

4.1.1 Installation of Glue Back

Step 1: Select a smooth position.

Step 2: Peel off the adhesive sticker and press the device in the selected position.

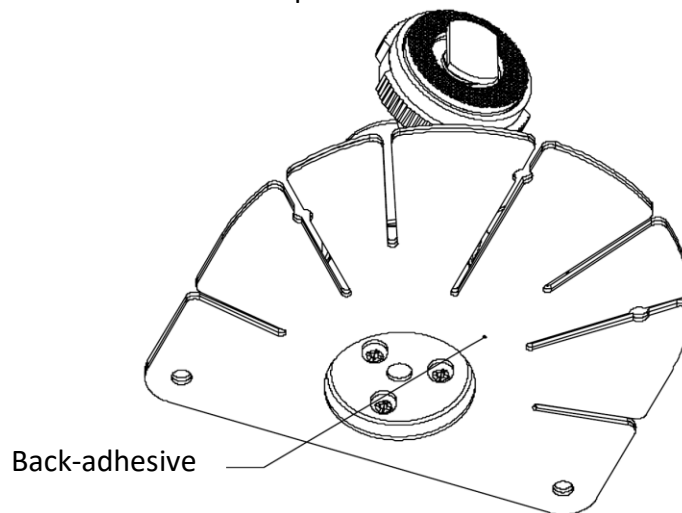 


Figure 4-1

4.1.2 Screw Installation

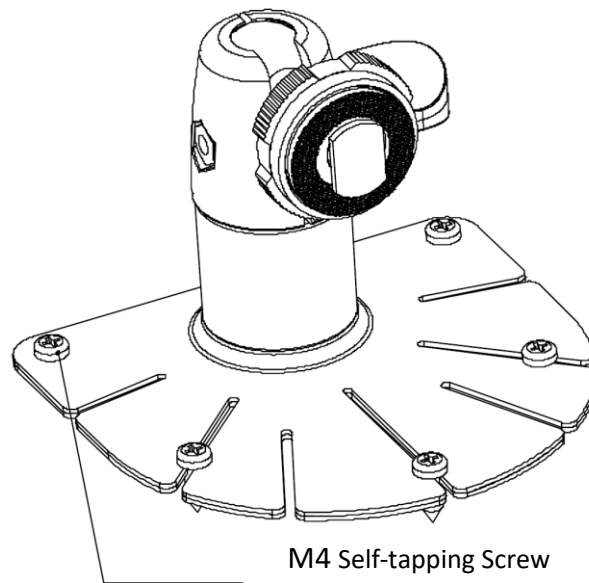 


Figure 4-2

4.2 Fixed Screen

Step 1: Insert the bracket with the back-end of the screen.

Step 2: Torque “Fixed Terminal 1”

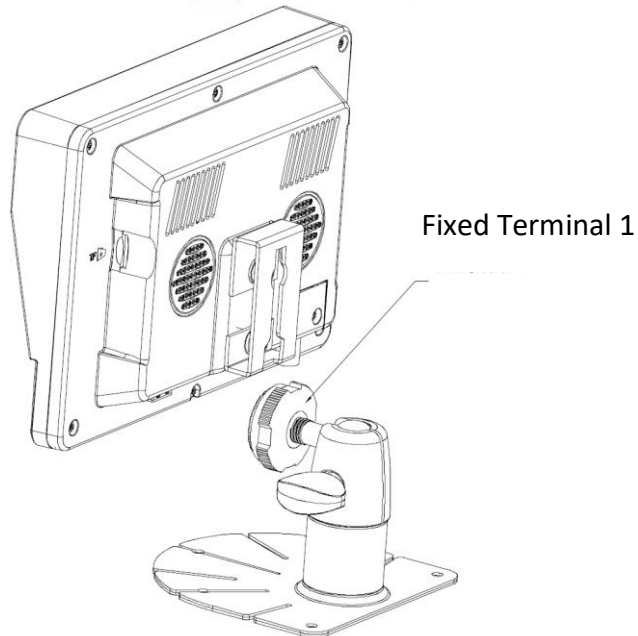 


Figure 4-3

Step 3: After adjusting the angle of the gimbal bracket to the correct angle, tighten the “Fixed Terminal 2”.

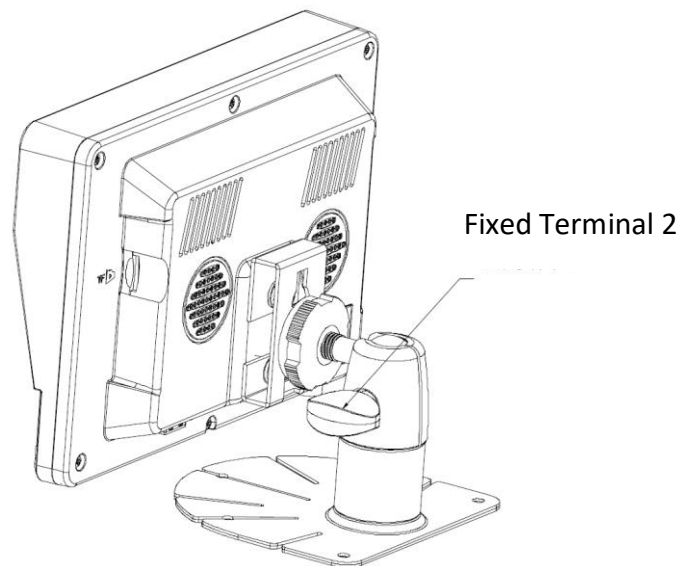 


Figure 4-4

4.3 Wiring Installation

Step 1: Connect the screen to the host terminal according to the cable remarks.

Step 2: Select wiring mode according to the scene. Select extension cable according to the configuration list to increase connection distance.

Step 3: Install external device (front camera, rear camera, left camera, right camera, Gmouse, alarm device) according to cable remarks.

4.4 Camera Installation Guidance

4.4.1 Confirm installation height and installation location.

For the installation of blind zone cameras in the left, right, and front, the height of the installation height of the camera in the front, BSD camera in the right, and the camera in the left blind zone should be the same. The distance between the installation height and the vertical distance of the ground should be between 2.5 m and 3 m. The actual vehicle installation picture is shown in Figure 4-5 to Figure 4-7.



Figure 4-5



Figure 4-6



Figure 4-7

BSD camera is installed near the vehicle front side, right side, and left side as shown in Figure 4-8 to Figure 4-10. Select the position fixed with the vehicle body (not to be closed or moved up or down). Secure to the vehicle (such as not being fixed to the door, or plastic mat on the right side). The camera lens is down, displaced, and horizontal. The area of the front side, right side, and left side can be seen clearly.



Figure 4-8



Figure 4-9



Figure 4-10

Incorrect installation as shown in Figure 4-11: Installation on plastic package will cause vibration of the vehicle body.



Figure 4-11

4.4.2 BSD Installation

Step1: Check the BSD camera installation location, mark down, wipe the surface of the marked vehicle, and attach the installation sticker (position camera and hole).

Step1: Put the BSD camera in a semi-tight position. Adjust camera position to ensure camera is down and image level.

Step3: Connect the BSD camera to the All-In-One camera and use the mobile app to preview the BSD camera. (Refer to User Manual for the operation of APP)

Step4: Adjust the angle of BSD camera according to the live view of cell phone app. The camera should be cut in parallel with the edge of the vehicle side. The vehicle should have no more than 10% of the live view, and can be installed with no deflection angle.

 
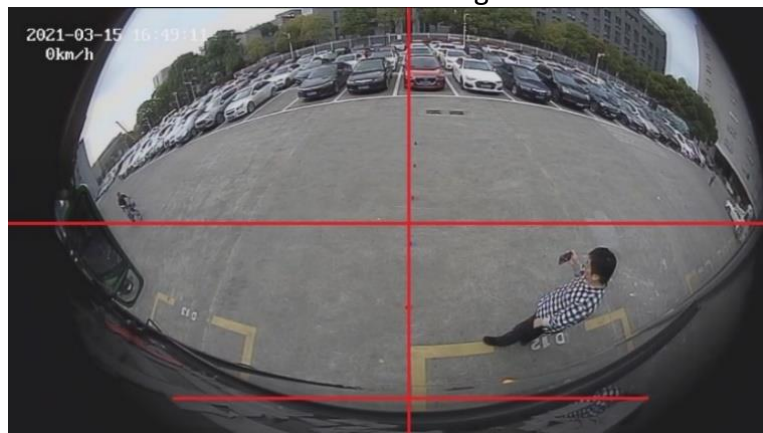 


Figure 4-12

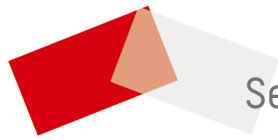

See Far, Go Further