



HIKMICRO Fixed Camera

V5.5.356

Release Notes

Legal Information

© Hangzhou Microimage Software Co., Ltd. All rights reserved.

About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the HIKMICRO website (www.hikmicrotech.com/).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks



and other HIKMICRO's trademarks and logos are the properties of HIKMICRO in various jurisdictions.

Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKMICRO MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKMICRO BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF

DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKMICRO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKMICRO SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKMICRO WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES. IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATTER PREVAILS.

TABLE OF CONTENTS

Chapter 1 Product and Version Information	3
Chapter 2 New Features	4
2.1 Rapid Startup	4
2.2 Fast Temperature Measurement.....	4
2.3 Shutter Freeze Duration.....	5
2.4 Support Analyzer	5
2.5 External optical calibration optimization.....	6
2.6 Supports external optical transmittance calculation	7
2.7 Secondary calibration	8
2.8 Capture with radiometric information	9
2.9 Self-diagnostic	10
2.10 Halo Suppression.....	10
Chapter 3 Optimization	11
3.1 Frame rate optimization	11

Chapter 1 Product and Version Information

Version information

Item	Description
Firmware Version	V5.5.356 build 260807
Measurement Algorithm Version	V2.2.1 build 20251230
Web Component Version	V5.0.114_R0108 build 20260416

More information

- [Focus Free Box Camera](#)
Involved Models : QF610, QF310,QF210
- [High Frame Rate R&D Box Camera](#)
Involved Models : QD610
- [R&D Box Camera](#)
Involved Models : HM-TD2C68E-25/Q
- [Heat Resistant Bullet Camera](#)
Involved Models (Non-High-Temp. Measurement): HF310, HF610

Versions V5.5.356 and later do not support **rolling back** to versions prior to V5.5.356.

Welcome to visit HIKMICRO official website for more information about HIKMICRO industrial products. <https://www.hikmicrotech.com/en/industrial-products/>

Chapter 2 New Features

2.1 Rapid Startup

Devices can now boot up in approximately 15 seconds. The IP address will be quickly detected, allowing you to log into the web interface immediately to stream images and measure temperatures without delay.

2.2 Fast Temperature Measurement


Increases the frame rate of temperature measurement to **50 fps** to meet the needs of temperature measurement for moving objects in pipeline inspection scenarios.

The screenshot displays the HIKMICRO web interface for configuring temperature measurement parameters. The left sidebar contains navigation options: Live View, Playback, Event Center, Configuration, and Maintenance and Security. The main content area is titled 'Temperature Measurement Parameter' and features a red 'Integration' tab. Below the tabs, the 'General Parameter' section includes fields for Emissivity (0.96), Distance to Target (2 m), a toggle for Enable Reflection Temperature, and a Data Length dropdown (4). The 'Real-Time Data Upload' section has a 'Max. Frame Rate' dropdown set to 50. The 'Capture Configuration' section includes a 'Refreshing Interval of Temperature Mapping Table' dropdown (12-25) and a 'Thermal Picture Resolution' dropdown (50). A red 'Save' button is at the bottom right.


Temperature Measurement Parameter	
Integration	
Pixel-to-Pixel Ther...	
General Parameter	
*Emissivity	0.96
*Distance to Target	2 m
Enable Reflection Temperature	☐
Data Length	4
Real-Time Data Upload	
Max. Frame Rate	50
*Refreshing Interval of Temperature Mapping Table	12, 15, 16, 18, 20, 22, 25
Capture Configuration	
Display Thermometry Rule Info. on Picture	
Upload Thermal Picture	25, 50
Thermal Picture Resolution	50
Save	

2.3 Shutter Freeze Duration

Devices can now boot up in approximately 15 seconds. The IP address will be quickly detected, allowing you to log into the web interface immediately to stream images and measure temperatures without delay.

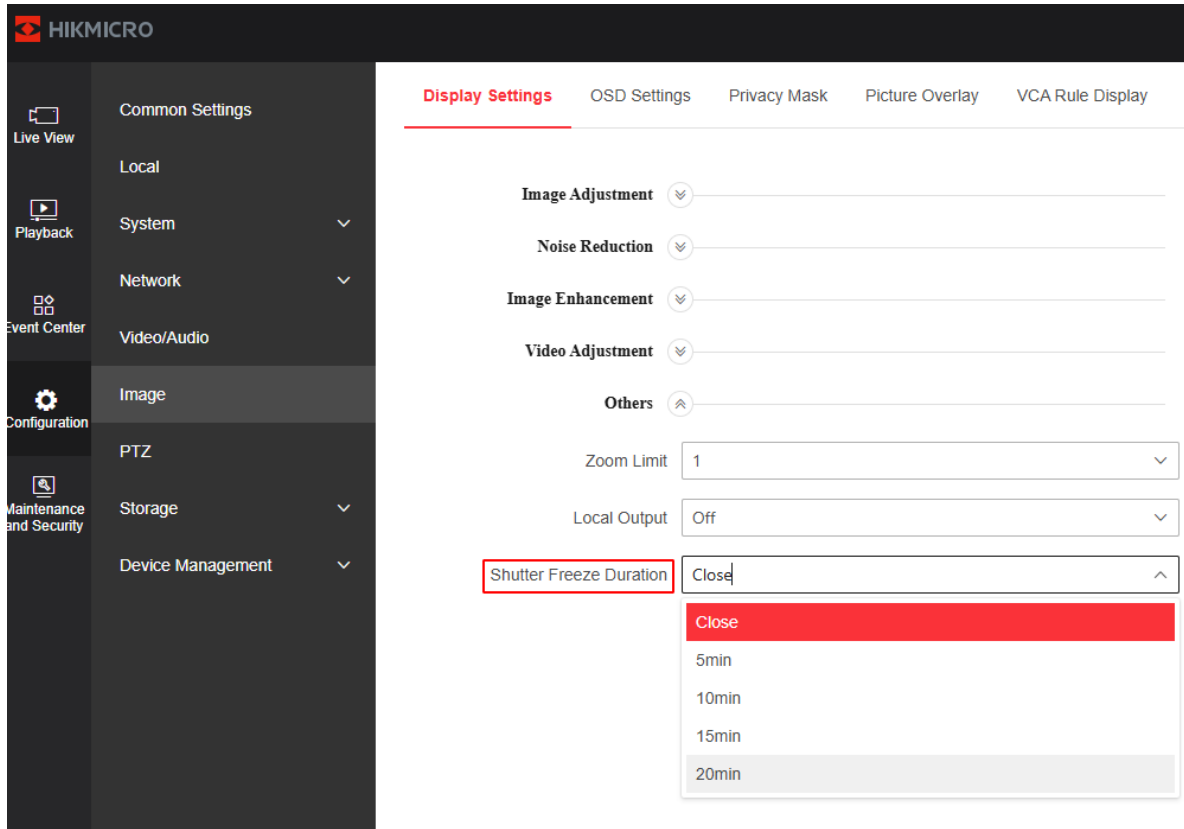

2.4 Support Analyzer

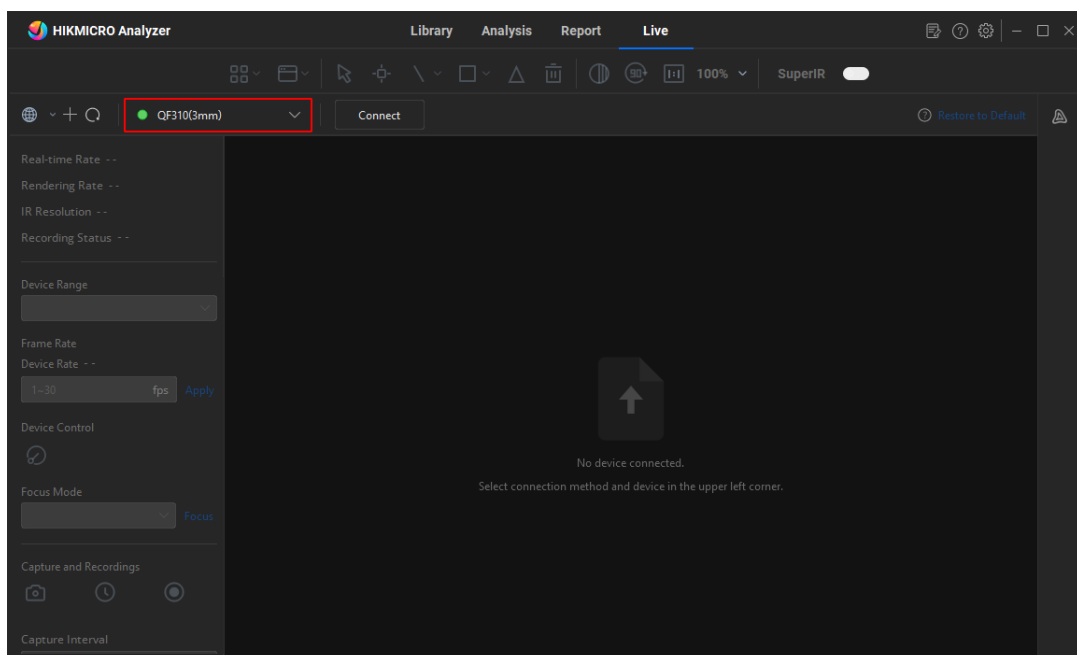

2.5 External optical calibration optimization


When a user configures an external optical temperature without enabling calibration coefficients, the device automatically calculates the calibration coefficients based on the cavity temperature minus the ambient temperature, and then applies these calculated coefficients to the device.

Users can refresh the web page to retrieve the calculated calibration coefficients and configure this parameter in other devices of the same model.

The screenshot displays the Hikmicro web interface. On the left is a dark sidebar with navigation icons and labels: 'Live View', 'Playback', 'Event Center', 'Configuration', and 'Maintenance and Security'. The main content area has a top bar with 'HIKMICRO' and a 'Temperature Measurement Parameter' section with a red 'Integration' tab. Below this are three sub-tabs: 'Pixel-to-Pixel Ther...', 'Raw Data', and 'Integration Calibr...'. The 'Integration Calibr...' tab is active, showing the 'External Optical Calibration' settings. A blue information box states: 'After configuring External Optics Temperature, the system will calculate Calibration Coefficient'. The settings include: 'External Optics Transmittance*' with a text input field containing '1'; 'Enable Calibration Coefficient' with a toggle switch that is currently off; 'Calibration Coefficient*' with a text input field containing '21.76'; and 'External Optics Temperature*' with a text input field containing '20' and a '°C' unit selector.

2.6 Supports external optical transmittance calculation

Users can use tools to calculate the actual external optical transmittance after the device integrates the optical window.

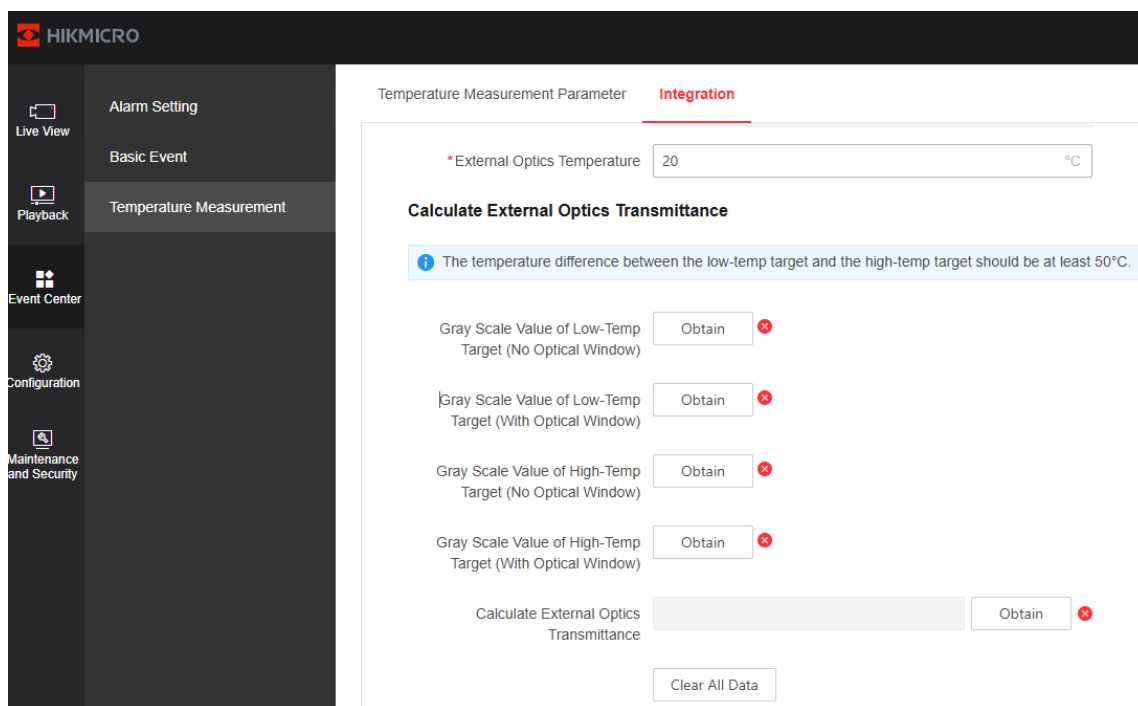

Operating Steps:

Step 1: Low-Temp Calibration (No Window)

1. Place a blackbody in front of the lens and set it to low temperature.
2. On the integration page, drag the black circle to the center of the blackbody.
3. Click "Get Low-Temp Gray Value (No Window)".
4. A green checkmark will appear when done.

Step 2: Low-Temp Calibration (With Window)

1. Place the optical window in front of the lens.
2. Click "Get Low-Temp Gray Value (With Window)".
3. A green checkmark will appear when done.

Step 3: High-Temp Calibration (No Window)

1. Set the blackbody to high temperature.
2. Click "Get High-Temp Gray Value (No Window)".
3. A green checkmark will appear when done.

Step 4: High-Temp Calibration (With Window)

1. Place the optical window in front of the lens.
2. Click "Get High-Temp Gray Value (With Window)".
3. A green checkmark will appear when done.

Step 5: Calculate Transmittance

1. Ensure all 4 previous steps show green checkmarks.
2. Click "Get External Optical Transmittance".
3. The calculated value will appear in the greyed-out box, and a green checkmark will show.

2.7 Secondary calibration

Step 1: Preparation and Parameter Configuration

Place the blackbody in front of the device lens.

Configure the relevant parameters on the web page: target distance, ambient temperature, emissivity, and calibration point temperature (default values are recommended).

Re-Calibration

 Re-Calibration is only supported when the temperature range is in non-automatic mode. After re-calibration, the external optics transmittance is set to 1 by default.

* Ambient Temperature	25	°C
* Emissivity	0.96	
* Distance	2	m
Temperature Range	-20.0~150.0	
Calibration Point 1 Temperature	30	Check Point ... 
Calibration Point 2 Temperature	60	Check Point ... 
Calibration Point 3 Temperature	100	Check Point ... 
Calibration Point 4 Temperature	150	Check Point ... 
Start Calibration  Clear All Point Position		
Save		

Step 2: Configure Calibration Point Coordinates One by One

In the web-based calibration preview interface, move and find the position of the blackbody that meets the "calibration point temperature value".

Align the black circle on the interface with that temperature area.

Click the "Coordinate Configuration" button for the corresponding calibration point.

View operation feedback:

 Green checkmark: Indicates successful configuration of the point.

 Red cross: Indicates configuration failure; readjust the position and configure again.

Note: Repeat the above steps until all 4 temperature points have completed coordinate configuration.

Step 3: Perform Calibration

After confirming that all 4 temperature points have been successfully configured, click the "Start Calibration" button to complete the secondary calibration for this setting.

View final operation feedback:

✓ Green checkmark: Indicates successful calibration for this setting.

✗ A red cross indicates calibration failure; please check and try again.

2.8 Capture with radiometric information


It supports capturing images linked to alarm inputs and images linked to temperature measurement alarms, which carry radiometric information and can be imported into Analyzer software for offline secondary temperature measurement analysis.

The top screenshot shows the 'Temperature Measurement Parameter' configuration page in the Hikmicro web interface. The 'Basic Parameter' tab is selected. The 'Pixel-to-Pixel Thermometry Data' section includes a toggle for 'Display Pixel-to-Pixel Thermometry Data on Stream' (disabled) and a dropdown for 'Pixel-to-Pixel Thermometry Data Refresh Interval' (3sec). The 'Capture Configuration' section includes a dropdown for 'Display Rule Info. on Alarm Picture' (All Rules) and two toggles: 'Add Radiometric Info. on Capture' (disabled) and 'Add Thermographic Info. on Capture' (disabled). A 'Picture Quality' dropdown is set to 'High'. A 'Save' button is at the bottom.


The bottom screenshot shows the same page with the 'Overlay & Capture' tab selected. The 'Add Radiometric Info. on Capture' toggle is now enabled (green). A red arrow points to this toggle with the text: "Supports Analyzer secondary analysis; a full-screen temperature measurement matrix can be exported via Analyzer." Another red arrow points to the 'Add Thermographic Info. on Capture' toggle with the text: "Does not support Analyzer secondary analysis; temperature data for each point can be read from image information." The 'Save' button is still present.

2.9 Self-diagnostic

The system conducts automated self-diagnosis on the core functions of the temperature measurement module, facilitating efficient troubleshooting for both users and technicians.

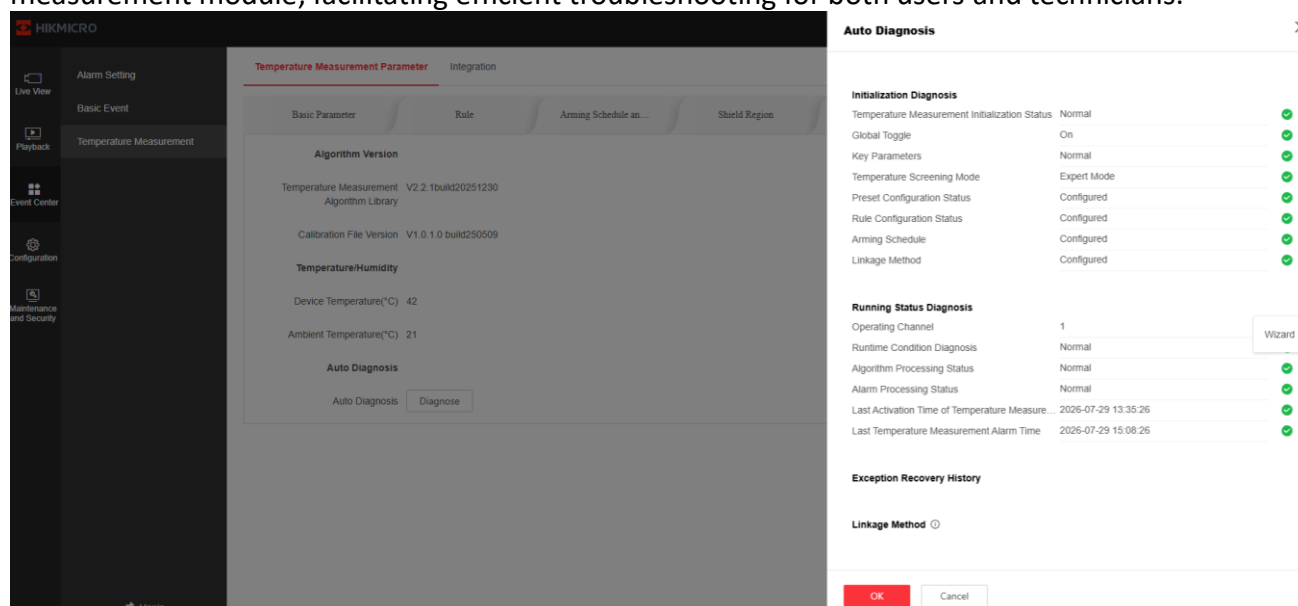

2.10 Halo Suppression

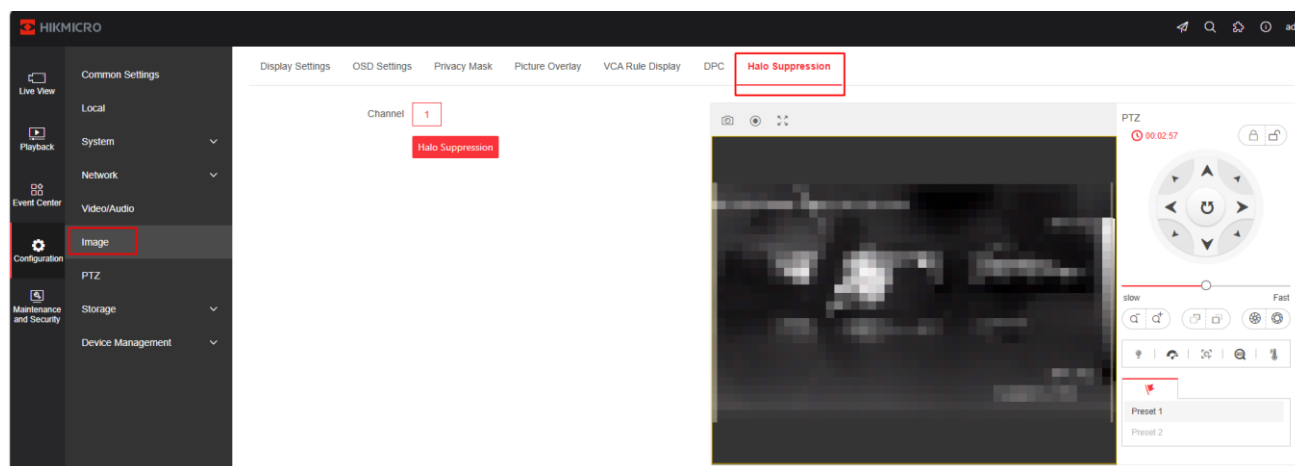

Tips :

- ① Before removing the halo, ensure the machine is fully warmed up; allow it to run for **at least one hour**.
- ② Removing the halo is time-consuming. Aim the lens at a **low-emissivity, room-temperature, uniform surface** and keep the machine stationary until the operation is successful. Otherwise, image quality will be affected.

Chapter 3 Optimization

3.1 Frame rate optimization

Performance has been optimized so that the video frame rate of the camera connected to the Analyzer software via UVC can meet the frame rate of the camera module. The current maximum frame rate of the camera module is **50 frames per second**.

3.2 Bug fixed



HIKMICRO

See the World in a New Way