



Quick Start Guide (EN)

Legal Information

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Applicable Models

This manual is applicable to the Scheduling Panel.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Note	Provides additional information to emphasize or supplement important points of the main text.
 Caution	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Danger	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.

Safety Instructions

Please read all the safety information carefully before using.

- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- The device shall not be exposed to water dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the device.
- Provide a surge suppressor at the inlet opening of the device under special conditions such as the mountain top, iron tower, and forest.
- **CAUTION:** If the fuse of the device can be replaced, replace it only with the same model to reduce the risk of fire or electric shock.
- If the device uses a 3-prong power supply plug, it must be connected to an earthed mains socket-outlet properly.
- The socket-outlet shall be installed near the device and shall be easily accessible.
- Do not touch the bare components (such as the metal contacts of the inlets) and wait for at least 5 minutes, since electricity may still exist after the device is powered off.
- Ensure correct voltage and wiring of the terminals for connection to mains supply.



● **WARNING**

1. Do not ingest battery. Chemical Burn Hazard!
2. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
3. Keep new and used batteries away from children.
4. If the battery compartment does not close securely, stop using the product and keep it away from children.
5. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
6. CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
7. Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).
8. Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.
9. Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.
10. Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.
11. Dispose of used batteries according to the instructions.

● + identifies the positive terminals of the device which is used with, or generates direct current, and - identifies the negative terminal(s) of the device which is used with, or generates direct current.

- No naked flame sources, such as lighted candles, should be placed on the device.
- This device is suitable for mounting on concrete or other non-combustible surface only to avoid fire hazard.
- The USB port of the device is used for connecting to a mouse, a keyboard, or a USB flash drive only. The current for the connected device shall be not more than 0.1 A.
- The serial port of the device is used for debugging only.
- If a power adapter is provided in the device package, use the provided adapter only.
- Install the device according to the instructions in Quick Start Guide.
- To prevent injury, this device must be securely attached to the installation surface in accordance with the installation instructions.
- Never place the device in an unstable location. The device may fall, causing serious personal injury or death.
- The additional force shall be equal to three times the weight of the device but not less than 50 N. The device and its associated mounting means shall remain secure during the installation.
- After the installation, the device, including any associated mounting plate, shall not be

damaged.

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.
- Keep vertical when moving or using the device.
- CAUTION: If the bracket is designed for a specific device model of our company, use the bracket with the corresponding device only. Use with other devices may result in instability and cause injury. Refer to Datasheet for details.
- CAUTION: This device is for use only with the provided bracket. Use with other (carts, stands, or carriers) may result in instability causing injury.
- The interface varies with the models. Please refer to the product datasheet for details.
- Make sure that the power has been disconnected before you wire, install, or disassemble the device.
- If smoke, odor, or noise arises from the device, immediately turn off the power, unplug the power cable, and contact the service center.

TABLE OF CONTENTS

Chapter 1 Introduction	8
1.1 User Manual Important Notices	8
1.2 Package Contents	9
1.3 Features	10
Chapter 2 Installation	11
2.1 Exterior Components	11
2.2 Installation Instructions	12
Chapter 3 Wiring instructions	14

Chapter 1 Introduction

Scheduling panel



1.1 User Manual Important Notices

Copyright Information

 
All intellectual property rights in this publication are owned by and protected by applicable copyright laws and international treaty provisions. retains all rights not expressly granted. No part of this publication may be reproduced in any form whatsoever or used to make any derivative work without prior written approval by . Reserves the right to revise this publication, and/or make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time without prior notice. The information in this document is provided in good faith, but without any representation or warranty whatsoever, whether it is accurate, or complete or otherwise, and on express understanding that shall have no liability whatsoever to other parties in any way arising from or relating to the information or its use. All other trademarks are the property of their respective owners. Other company and brand products and service names are trademarks or registered trademarks of their respective holders.

- 1) Do not push objects into holes and ventilation slots.
- 2) Do not expose this product to moisture or place any objects filled with liquids on or near the product.
- 3) Do not place a naked flame source, such as lighted candles, on or near this product.
- 4) Do not store or operate the device in environments where the temperature is above 50 degrees celsius or below -10 degrees celsius.
- 5) Do not intentionally hit the device or place heavy or sharp objects on the device.
- 6) Only use accessories specified by the manufacturer.
- 7) Keep the device away from benzene, diluents, and other chemicals.

8) Do not attempt to repair this product yourself. Always use a qualified service agent to perform adjustments or repairs.

1.2 Package Contents


Please make sure all of the following items are present when you unpack your Scheduling panel.

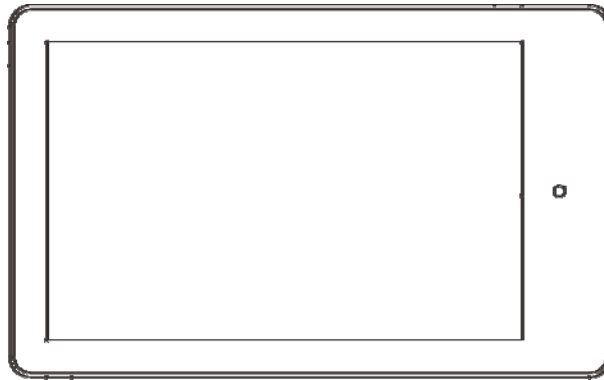


Scheduling panel



 Power Adapter

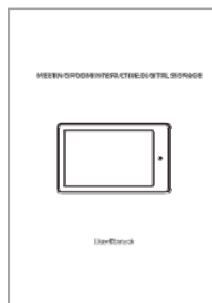

Quick Start Guide

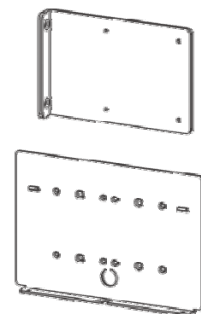 

Vesa Mount Metal Kit



With Wall Plug

Ø 6 × 36 mm × 6



Screw

KA4.0 × 30 mm × 6

1.3 Features

10.1"LCD panel resolution 1280 × 800

Quad core cortex A55

RAM Optional 2 GB

Internal memory Optional 16 GB

Android 11

10-point capacitive touch

Wi-Fi 802.11 a/b/g/n/ac

Ethernet interface (POE function standard IEEE802.3at, POE +, class 4, 25.5 W)

Bluetooth 4.1

Standard single wide-angle camera (2.0M/P)

SD card/Micro USB OTG

USB for serial

USB 3.0 host

3.5 mm earphone

NFC 13.56 M

Microphone

 
LED light bar with RGB and mixed color

2 × 2 W Speaker

Adapter, 12V/1.5A

Chapter 2 Installation

2.1 Exterior Components

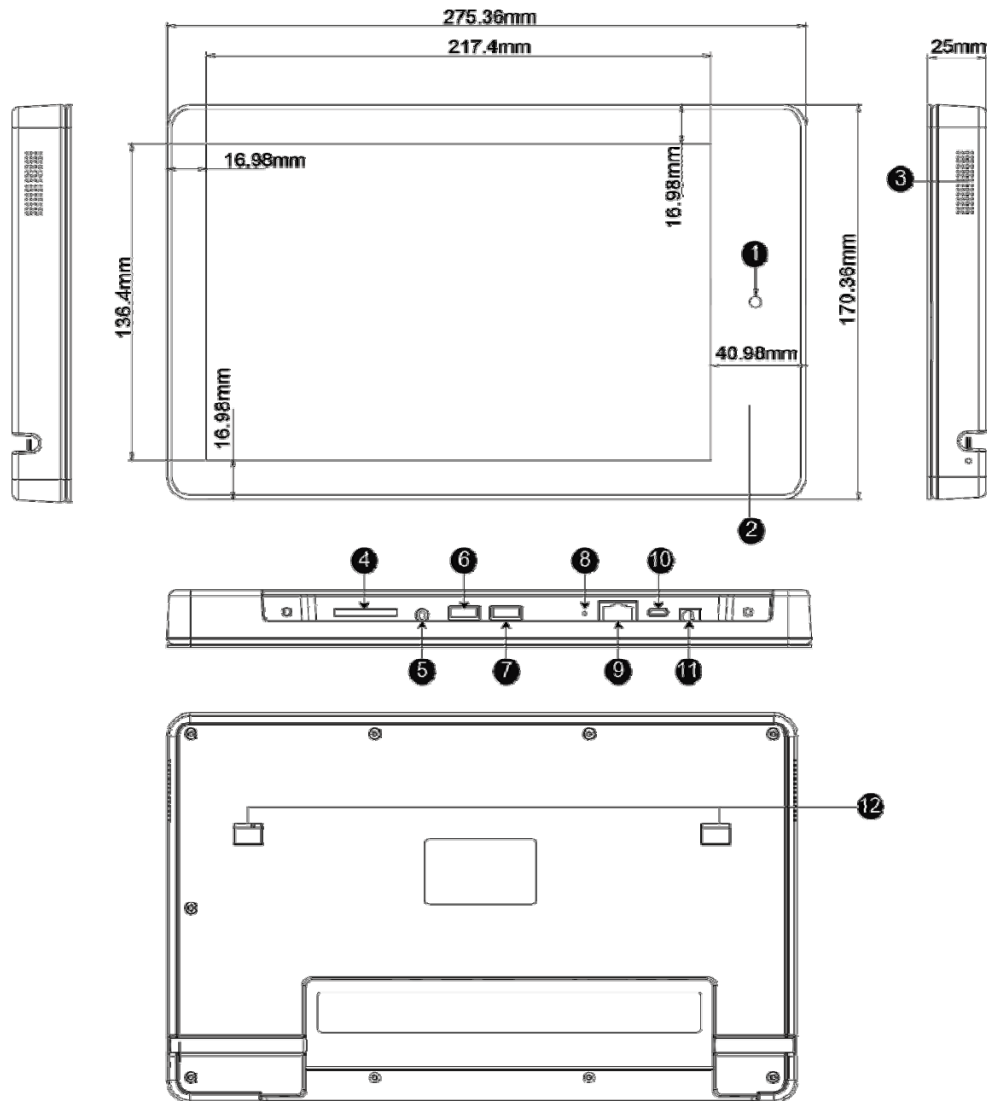


No	Function	No	Function
1	Camera	7	USB for serial(TTL format)
2	NFC(Optional)	8	Recovery
3	Speaker	9	RJ45 with POE
4	SD Card	10	Micro USB OTG
5	3.5mm earphone with MIC	11	DCin power supply port
6	USB 3.0 host	12	VESA:204.5MM

2.2 Installation Instructions


Wall Hanging Mode 1

 1

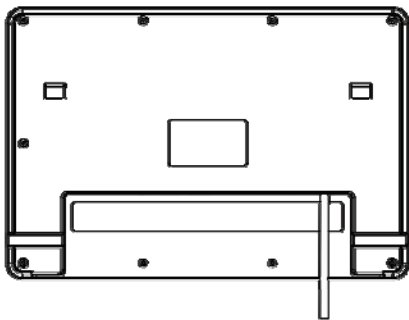


Plug the power cable into port of device.

 2

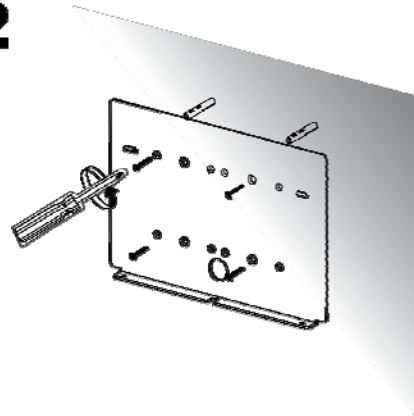


Install the wall mount kit on wall and screw in.

 3

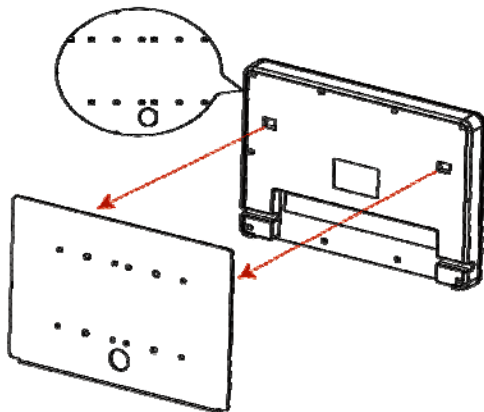

Hang up and align the wall mount kit with its hole.

 
4

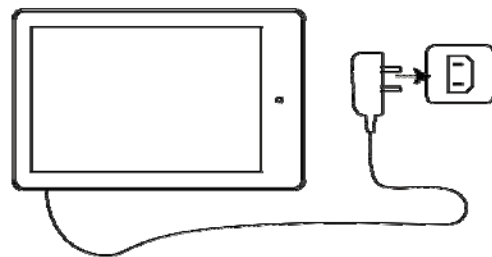

Plug into power and the device will start up.


Wall Hanging Mode 2

 1

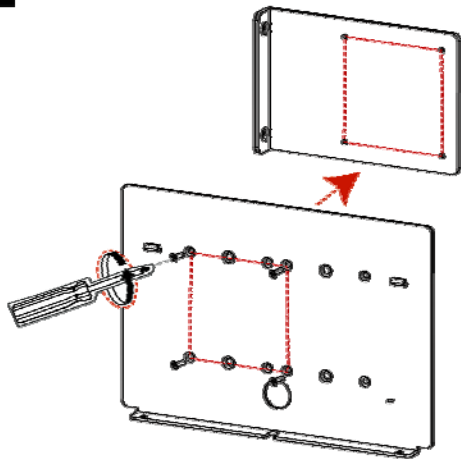


Firstly, align the small wall mount kit (L-shaped) with the large wall mount kit at the screw hole and fasten the screws.

 2

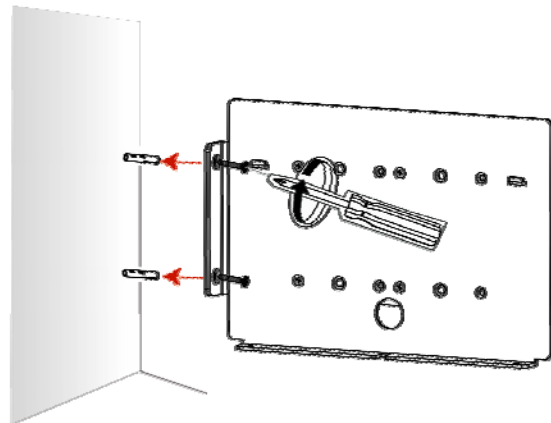


Screw the wall plug into the wall, then align the hole of the (L-shaped) small wall mount kit and then fasten in the screws.

 3

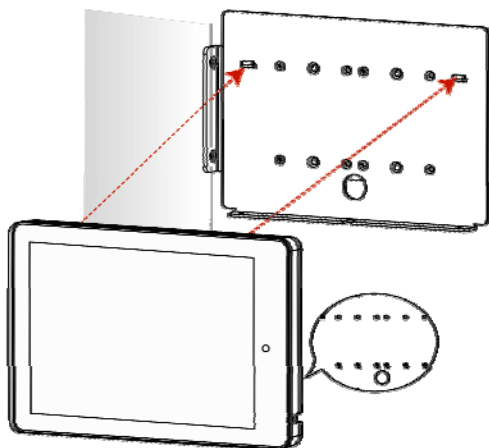

Hang up and align the wall mount kit with its hole.

 4

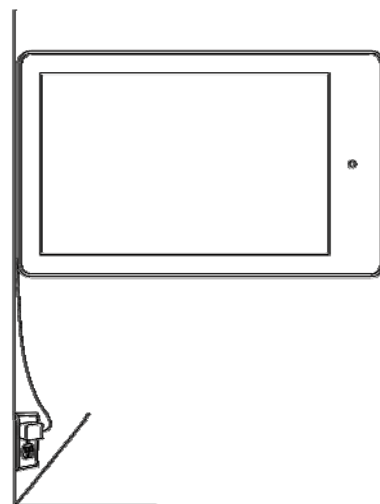

Plug into power and the device will start up.

Chapter 3 Wiring instructions

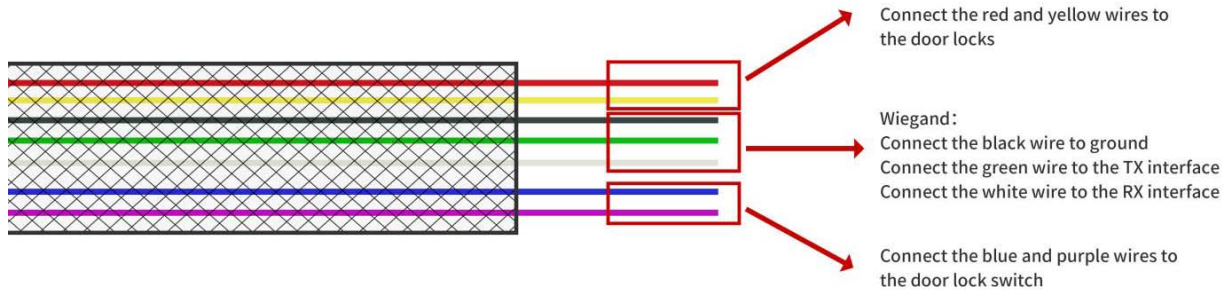 


Table Wring Description

NO.	Color	Description
1	Red	Connecting door locks
2	Yellow	Connecting door locks
3	Black	Gnd
4	Green	Connecting TX
5	White	Connecting RX
6	Blue	Connecting door lock switch
7	Purple	Connecting door lock switch



See Far, Go Further