

Legal Information

- About this Document**
- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereafter are for description and explanation only.
 - The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<http://www.hikvision.com>), unless otherwise agreed. Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
 - Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product
This product can only enjoy the after-sales service support in the country or region where the purchase is made.

- Acknowledgment of Intellectual Property Rights**
- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
 - Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
 - HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
 - Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION.

WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ANOMALY, OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBERATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW, ESPECIALLY YOU ARE RESPONSIBLE FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OR MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR FUEL-CYCLE, OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICT BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Applicable Models
This guide is applicable to the model: DS-3WRE3N

Symbol Conventions
The symbol that may be found in this document is defined as follows.

Symbol	Description
	Provides additional information to emphasize or supplement important points of the main text.

- Packing List**
- WiFi Extender x 1
 - Quick Start Guide x 1
 - Regulatory Compliance and Safety Information x 1

Chapter 1 Introduction

Indicator

Indicator	Scenes	Description
	Power-on	Solid red: Starting Blinking red: Startup completed Off: Powered off
	Extend network	Solid green: Extended successfully, and the connection quality is good Solid orange: Extended successfully, and the connection quality is poor Blinking red: Extending your existing Wi-Fi network, or extending failed
	WPS	Solid red 3 seconds → Blinking quickly red: Performing WPS negotiation with a Wi-Fi router
	Reset	Blinking red once (reset succeeded) → Solid red (extender starting) → Blinking red (extender startup completed)

- Buttons**
- WPS button**
For instructions, see Method 2 in Chapter 3 Connect the extender to the Internet.
 - Reset button**
With your extender powered on, press the reset button (RST) using a paper clip. Release it when the indicator lights red. The extender is restored to the factory settings.


Chapter 2 Power on the extender

Plug the extender into a power outlet near the Wi-Fi router. Ensure that the indicator () blinks red.




Chapter 3 Connect the extender to the Internet

Method 1: Set up the extender by web UI
1. Connect your Wi-Fi-enabled device to the Wi-Fi network of extender. The default Wi-Fi name (SSID) is labeled on your extender. By default, it has no password.

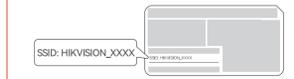

Chapter 4 Relocate the extender

- Refer to the following relocation tips to locate the extender to obtain a better performance.
 - Place the extender between the Wi-Fi router and the Wi-Fi dead zone (within the coverage of the router).
 - Keep your extender away from electronics with strong interference, such as microwave ovens, induction cookers, and refrigerators.
 - Place the extender in a high position with few obstacles.
 - Unfold the antennas and point them vertically upwards.
- Observe the indicator of the extender to ensure the extender is located in the proper position.
 - Solid green: Extended with good connection quality.
 - Solid red: Extended with poor connection quality.

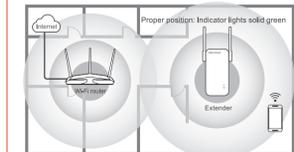

3. If the connection quality is poor, move the extender closer to the Wi-Fi router.

- You will be directed to the quick setup page within one minute. If not, start a web browser, and enter <http://hiextender.net> or 192.168.0.1 in the address bar to access the extender's web UI.



- Choose the Wi-Fi network to be extended.
- If the Wi-Fi network you choose is encrypted, enter its Wi-Fi password. Change the Wi-Fi name and Wi-Fi password (if any) of the extender as required. If not changed, the extender's Wi-Fi name and Wi-Fi password are the same as those of your existing Wi-Fi network.
- Tap Done or Finish.



Chapter 5 Connect clients to the Internet

Connect your Wi-Fi-enabled devices to the extender's Wi-Fi network. After extending, the Wi-Fi name and Wi-Fi password of the extender are the same as those of the router or those you set on the web UI.




Wait until the **Extended successfully** page appears.

Method 2: Set up the extender by WPS button

Note
This method is applicable for the Wi-Fi router having a WPS button, which may be indicated by or .

- Press the WPS button on the Wi-Fi router to enable its WPS function.
- Within 2 minutes, press the WPS button (1-3s) on the extender.

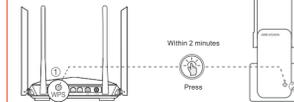

Chapter 6 FAQ

- Q1. I cannot log in to the web UI of the extender. What should I do?**
- A1.**
- Ensure that your Wi-Fi-enabled device (such as smartphone) has connected to the Wi-Fi network of the extender.
 - Before extending: Use the default Wi-Fi name (SSID) labeled on your extender.
 - After extending: Stay near your extender. Reconnect the extender's Wi-Fi by referring to Chapter 5 Connect clients to the Internet.
 - If a smartphone is used, ensure that the Mobile Data (if any) function is disabled.
 - If the problem persists, reset the extender by referring to Buttons, and then log in again.
- Q2. The extender cannot find the Wi-Fi network of my router. What should I do?**
- A2.**
- Ensure that your smartphone can detect the Wi-Fi network of your Wi-Fi router.
 - Change the channel of your Wi-Fi router, and try again.
 - Change the encryption type of the Wi-Fi router to WPA2-PSK or WPA3-PSK and try again.
- Q3. I cannot find the Wi-Fi name of the extender after extending network successfully. What should I do?**
- A3.** The possible reason is that you did not customize the extender Wi-Fi name when extending the network. In this case, the Wi-Fi name of the extender is the same as the upstream Wi-Fi router after the extension is successful.
- Q4. How to reset the extender?**
- A4.** See Button in Chapter 1 Introduction.
- Q5. How to set up a login password for my extender?**
- A5.** Connect your Wi-Fi-enabled device to the extender's Wi-Fi network, log in to extender's web UI, and perform as follows:
- For smart smartphones/tablets:
 - Tap on the homepage, tap **Set Login Password**, then follow the on-screen instructions.
 - For laptops, or a desktop computer installed with a wireless extender:
 - Navigate to **Administration**, and follow the on-screen instructions.